The IMPRESSA C9 Manual

User-friendly documentation
TÜV SÜD
DocCert
Checked documentation
comprehensible
complete
safe
Voluntary test according to TPS-Standard PPP 13010

The 'IMPRESSA Manual' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

Your IMPRESSA C9

IMPORTANT SAFEGUARDS 4
Control elements 8
Proper use 10
For your safety 10
The IMPRESSA C9 Manual 13
Symbol description 14
Welcome to the world of JURA! 15
1 IMPRESSA C9 16
Connector System© 17
JURA on the Internet 17
Knowledge Builder 17
2 Preparing and using for the first time 18
Supplied as standard 18
Set up 18
Filling the water tank 18
Filling the bean container 19
First-time use 19
Using and activating filter 20
Determining water hardness and adjusting 22
Adjusting the grinder 23
Switching on 24
Switching off (standby) 24
3 Familiarising yourself with the control options 25
Preparation at the touch of a button 26
One-off settings before and during preparation 26
Adjusting the default amount of water to suit the cup size 27
Permanent settings in programming mode 28
Query information and maintenance status 30
4 Recipes 32
5 Preparation at the touch of a button 38
Barista tips 38
Espresso 39
Coffee 40
Cappuccino 40
Pre-ground coffee 42

Foaming milk with the Easy Cappuccino Frother 43
Foaming and heating milk with the Professional Cappuccino Frother 43
Hot water 44

6 Permanent settings in programming mode 45
Products 45
Energy saving mode (E.S.M.©) 47
Time 48
Programmable switch-on time 48
Automatic switch-off 49
Unit amount of water/Time format 50
Language 50

7 Maintenance 52
Maintenance tips 52
Rinse machine 52
Filter change 53
Clean machine 54
Descale machine 56
Rinsing the Easy Cappuccino Frother 58
Cleaning the Easy Cappuccino Frother 59
Disassembling and rinsing the Easy Cappuccino Frother 60
Rinsing the Professional Cappuccino Frother 61
Cleaning the Professional Cappuccino Frother 62
Disassembling and rinsing the Professional Cappuccino Frother 63
Cleaning the bean container 63
Descaling the water tank 64

8 CLARIS plus filter cartridge – Water for perfect coffee 65

9 'The milk makes the difference' 71

10 Accessories and Service 73

11 Display messages 83

12 Troubleshooting 85

13 Transport and environmentally neutral disposal 87
Transport / Empty system 87
Disposal 87

14 Technical data 88

15 Key technologies and IMPRESSA range of products 90

16 JURA contact details 95

Index 100

IMPORTANT SAFEGUARDS

These safeguards apply for machines with UL safety test (see rating plate and chapter 14, 'Technical data').

Follow the basic safety precautions

When using electrical appliances, basic safety precautions should always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachement not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intented use.
- Use extreme caution when dispensing hot steam.
- For household use only.

SAVE THESE INSTRUCTIONS

Special cord set instructions

a. A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
   Your IMPRESSA has a 3-pin grounded plug.
b. Longer extension cords are available and may be used if care is exercised in their use.
c. If an extension cord is used,
   1. the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
   2. if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
   3. the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children of tripped over.

- As a safety feature, this plug will fit in a polarized outlet only one way.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not modify the plug in any way or attempt to defeat this safety feature.

Warning

To reduce the risk of fire or electric shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.

Caution

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- Check voltage to be sure that the voltage indicated on the name plate agreees with your voltage.
- Never use warm or hot water to fill the water container! Use cold water only.

- Keep your hands and the cord away from hot parts of the appliance during operation.
- Never clean with scouring powders or hard implements.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the grinder or ground coffee funnel (grunder by-pass). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean hopper. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never do anything with the machine which is not described in the User's Manual. In case of doubt, call your dealer.

Control elements

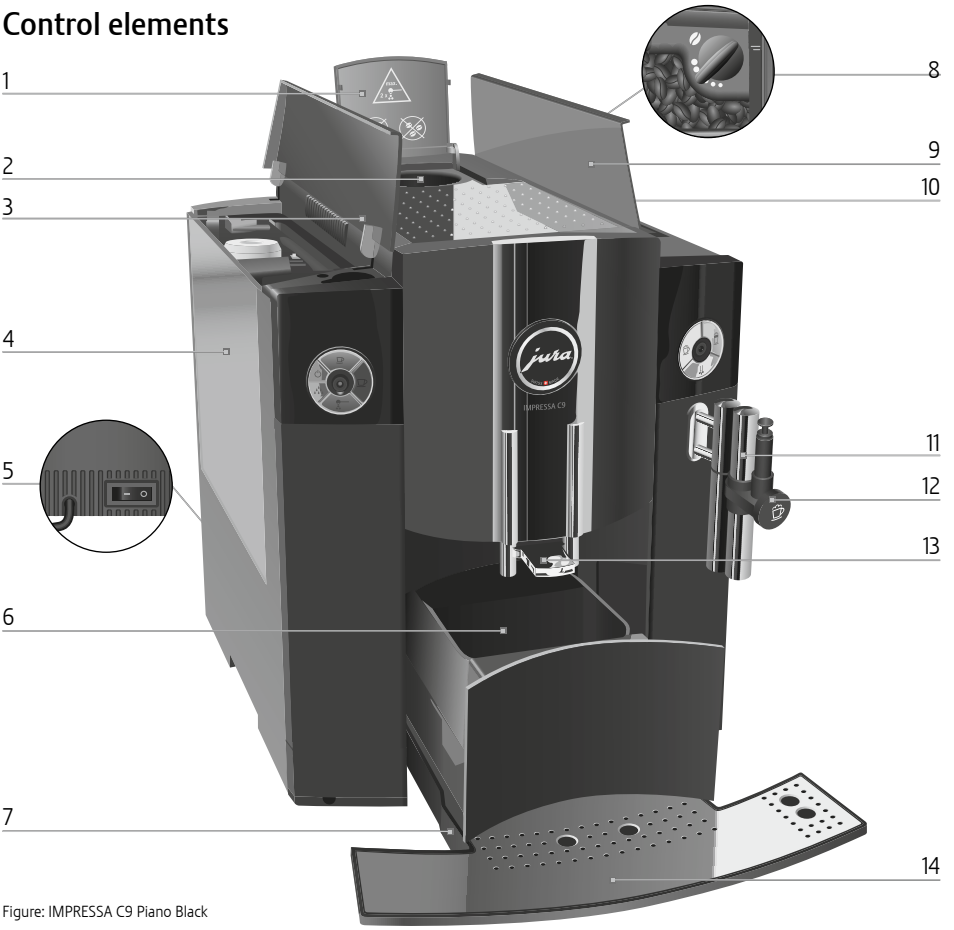

Figure: IMPRESSA C9 Piano Black

1 Cover of filler funnel for pre-ground coffee
2 Filler funnel for pre-ground coffee
3 Water tank cover
4 Water tank
5 Power switch and power cable (side of machine)
6 Coffee grounds container
7 Drip tray
8 Fineness of grind switch
9 Bean container cover
10 Bean container with aroma preservation cover
11 Connector System© for removable frothers
12 Easy Cappuccino Frother
13 Height-adjustable coffee spout
14 Cup platform

Front left:

1 Plain text display
- On/off button
- Maintenance button
- Espresso button
- Coffee button
- Pre-ground coffee button

2 Rotary Switch cover

3 Rotary Switch

Front right:
- Cappuccino button
- Milk foam button
- Hot water button

4 Easy Cappuccino Frother

5 Professional Cappuccino Frother

6 Hot water nozzle

The Connector System© permits the use of different frothers. These are available from stockists.

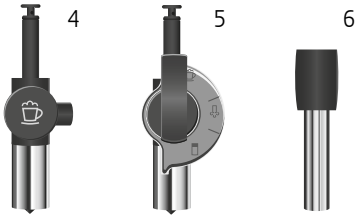

Proper use

The machine has been designed and built for domestic use. It should only be used to prepare coffee and to heat milk and water. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine always carefully read and comply with all these instructions. Keep this manual close to the IMPRESSA and, if appropriate, pass it on to the next user.

For your safety

Please read and note carefully the following important safety information.
By doing this, you can avoid the life-threatening danger of electric shock:

- Never use a machine which has been damaged or with a defective power cable.
- For information on what to do in case of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact the JURA service centre.
- If the power cable for this machine is damaged, it must be repaired either directly by JURA or by a JURA approved service centre.
- Make sure that the IMPRESSA and the power cable are not located close to hot surfaces.
- Be careful to ensure that the power cable does not get caught and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the IMPRESSA Manual. The machine contains live parts. If opened, there is a danger of serious injury. Repairs may only be carried out by JURA approved service centres, using original spare parts and accessories.

There is a risk of scalds or burns on the spouts or on the nozzle:

- Place the machine out of the reach of children.
- Do not touch any hot parts. Use the handles provided.

- Be careful to ensure that the appropriate nozzle is installed and clean. The nozzle or parts of the nozzle might come off if the parts are not assembled correctly or a blockage occurs.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the power cable to loosely hang down. The power cable can be tripped over or damaged.
- Protect your IMPRESSA from environmental influences such as rain, frost and direct sunlight.
- Do not put the IMPRESSA, cable or connections in water.
- Do not put the IMPRESSA or any individual parts in the dishwasher.
- Turn your IMPRESSA off at the power switch before starting any cleaning operation. Always wipe your IMPRESSA with a damp cloth rather than a wet one, and protect it from prolonged water splash.
- Only connect the machine to a power supply in accordance with the information on the rating plate. The rating plate is located on the underside of your IMPRESSA. Further technical data is given in Chapter 14 'Technical Data'.
- Use only original JURA care products. Use of accessories that are not explicitly recommended by JURA could damage the IMPRESSA.
- Do not use any coffee beans treated with additives or caramelised coffee beans.
- Always fill the water tank with cold, fresh mains water.
- If you will be absent for an extended period, turn the machine off and unplug.

Risk to children and persons with limited capabilities in operating machines:

- The machine is not designed to be operated by children and persons with limited capabilities.
- The machine may only be used by persons who are able to operate the machine safely.

Safe handling of the CLARIS plus filter cartridges:

- CLARIS plus filter cartridges should be kept out of the reach of children.
- Store them dry in the sealed package.
- Protect them from heat and direct sunlight.
- Do NOT use damaged CLARIS plus filter cartridges.
- Do NOT open CLARIS filter cartridges.

The IMPRESSA C9 Manual

You are holding the manual for your IMPRESSA C9 in your hand. It will help you to familiarize yourself with your IMPRESSA safely and quickly and teach you the full range of facilities it offers.

Chapter 2, 'Preparing and using your IMPRESSA for the first time', explains step-by-step how to set up and prepare the IMPRESSA.

Chapter 3, 'Familiarising yourself with the control options' is important for you to read as you are familiarising yourself with your IMPRESSA. It invites you to actively explore all the different coffee experiences that it offers.

As coffee and coffee specialities are very important to JURA, we have compiled a selection of tasty suggestions for you in Chapter 4, 'Recipes'.

All the other chapters are intended to help you when you have a specific query.

If you use the IMPRESSA C9, you will become a master at preparing exciting coffee specialities, you will be a Barista!

Symbol description

Warnings

⚠ CAUTION	Always take note of any information marked with the CAUTION or WARNING symbol. The signal word **WARNING** points out potential risk of serious injury, and the signal word **CAUTION** potential risk of slight injury.
CAUTION	The **CAUTION** symbol is used to draw attention to circumstances which could cause the machine to become damaged.

Symbols used

i	**Information** and tips to make things easier for you as you use your IMPRESSA.
@	References to the **online** JURA website, where you can find interesting further information: www.jura.com.
►	**Prompt to take action**. This symbol means that you are being prompted to perform some action.

Welcome to the world of JURA!

Dear customer,

We thank you for the trust that you have placed in us by purchasing a JURA IMPRESSA coffee machine. The machines, which are produced in Switzerland, have already impressed independent, critical testers of goods and design award juries. We will do everything we can to ensure that this fully automated, genuine 2-cup Espresso and coffee machine continues to deliver perfect coffee specialities at the press of a button to your family and your guests for years to come.

The IMPRESSA Manual will teach you everything you need to know on the subject of operating and tailoring your IMPRESSA to your particular preferences. Other subjects covered include how to solve the problem of scale build-up and important tips on care. Our primary concern is to stimulate your imagination with attractive coffee recipes and to invite you to put the wealth of possibilities offered by the JURA fully automated machine to use on a daily basis.

We wish you many stimulating and enjoyable moments with your IMPRESSA.

Yours sincerely,

Emanuel Probst
General Manager

1 IMPRESSA C9

Coffee that fulfils your wildest dreams

The new entry level model in the One Touch Cappuccino league is sure to please all cappucino fans with its simple 'touch of a button' function without having to move the cup. In elegant piano black and with a new user interface, the high-quality IMPRESSA C9 is fully in keeping with current trends and exudes an aura of superiority, durability and competence. It impressively demonstrates these attributes with each coffee speciality that you enjoy.

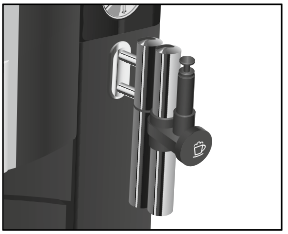

- **One Touch Cappuccino**: Your IMPRESSA C9 makes a cup of cappuccino at the touch of a button, without you having to move the cup. Hot milk foam, flowing into the cup and slowly starting to fill it. Steam which rises, awakening the anticipation of a delicious speciality. Aromatic coffee, blending with the milk, pushing up the milk foam topping. These are the protagonists in a sensuous drama - the drama of perfect coffee preparation.

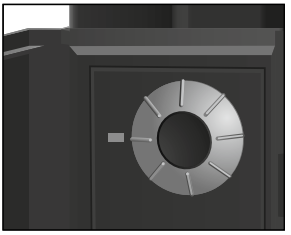

- **Simple operation**: With the clearly arranged control elements and the easy-to-understand text and graphic display, operation of the IMPRESSA C9 is also simple for beginners. You can navigate effectively through the individual programme steps by simply turning and pressing the Rotary Switch. The focus is on your personal taste. Simply select the coffee strength, amount of water and temperature according to your individual preferences.

- **Energy saving mode (E.S.M.©)**: The IMPRESSA C9 actively assists you in saving energy. With the Energy Saving Mode you can adjust the energy saving potential to suit the way you like to enjoy your beverages. The machine can be completely disconnected from the power supply at the main switch - for instance if you are going to be absent for some time.

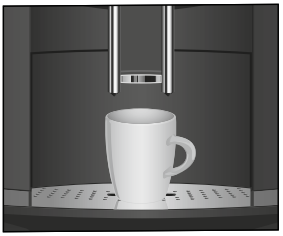

- **Height-adjustable coffee spout**: The height of the coffee spout, which can be adjusted within a range of 65 to 111 mm, can be adapted to all cup sizes on a continuous scale. This prevents coffee splashing on the machine and is your guarantee for a rich, thick crema.

Connector System©

The Connector System© permits the use of different cappuccino frothers:

- Professional Cappuccino Frother
  - Cappuccino, latte macchiato
  - Hot milk and milk foam
- Easy Cappuccino Frother
  - Cappuccino
  - Milk foam

JURA on the Internet

Visit us on the Internet.

@ At www.jura.com you will find interesting and up-to-date information on your IMPRESSA and on every aspect of coffee.

Knowledge Builder

You can familiarise yourself with your IMPRESSA C9 in a fun way on the PC.

@ The Knowledge Builder awaits you at www.jura.com. The interactive assistant, LEO, will support you and explain the benefits of and how to use your IMPRESSA.

2 Preparing and using for the first time

This chapter provides you with the information you need to use your IMPRESSA without any problems. You will prepare your IMPRESSA step-by-step for your first coffee experience.

Supplied as standard

The following items are supplied as standard:

- Your JURA IMPRESSA fully automatic coffee machine
- The Welcome Pack, which includes:
  - The IMPRESSA C9 Manual
  - IMPRESSA C9 – Quick Reference Guide
  - JURA cleaning tablets
  - Measuring spoon for pre-ground coffee
  - Aquadur® test strip
  - Hot water nozzle
- Milk container with milk pipe
- CLARIS plus filter cartridge
- JURA Auto-Cappuccino Cleaner

Set up

Keep the packaging for your IMPRESSA. It should be used to protect the machine during transportation.

When setting up your IMPRESSA, please note the following:

- Set the IMPRESSA down on a horizontal surface that is not sensitive to water.
- Choose a spot for your IMPRESSA which is protected against overheating.

Filling the water tank

To enjoy perfect coffee we recommend changing the water every day.

CAUTION

Milk, mineral water or other liquids can damage the water tank or the machine.

- ▸ Only fill the water tank with fresh, cold water.

- ▸ Remove the water tank and rinse it with cold water.
- ▸ Fill the water tank with fresh, cold water and reinsert.

Filling the bean container

The bean container has an aroma preservation cover. This will ensure that your coffee beans retain their aroma for longer.

CAUTION

Coffee beans which have been treated with additives (e.g. sugar), pre-ground or freeze-dried coffee will damage the grinder.

- ▸ Only use untreated coffee beans to refill the bean container.

- ▸ Open the cover of the bean container and remove the aroma preservation cover.
- ▸ Remove any dirt or foreign objects inside the bean container.
- ▸ Fill the bean container with coffee beans, then close the aroma preservation cover and the bean container cover.

First-time use

WARNING

If the machine is operated with a defective power cable, there is a danger of electric shock.

- ▸ Never use a machine which has a defective power cable.

Precondition: The water tank and bean container are full.

- ▸ Insert the mains plug into a power socket.

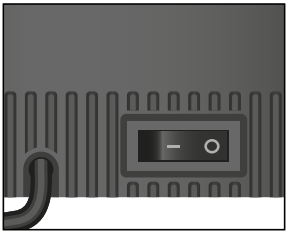

- ▸ Switch on the IMPRESSA using the power switch on the back of the machine.
  The indicator light lights up (standby).
- ▸ Press the On/Off button to switch the IMPRESSA on.
  The pre-set language appears on the display.

- ▸ Open the cover of the Rotary Switch.
  The Rotary Switch lights up.
- ▸ Turn the Rotary Switch until the desired language is displayed. For Example: LANGUAGE ENGLISH
- ▸ Press the Rotary Switch to confirm the language.
  OK appears briefly on the display to confirm the setting.
  PRESS RINSE, the maintenance button lights up.
- ▸ Close the cover of the Rotary Switch.

▸ Place a receptacle under the frother.

▸ Press the maintenance button.
SYSTEM FILLING, the system fills up with water. A small amount of water flows from the frother.
This operation stops automatically, the following appears on the display:
HEATING.
PRESS RINSE, the maintenance button lights up.

▸ Place a receptacle under the coffee spout.

▸ Press the maintenance button.
RINSING, the machine rinses. The operation stops automatically.
READY, your IMPRESSA is ready to use.

i When a coffee speciality has been prepared for the first time, it is possible that FILL BEANS is shown on the display as the grinder has not yet been completely filled with coffee beans. In this case prepare another coffee speciality.

Using and activating filter

Your IMPRESSA no longer has to be descaled if you are using CLARIS plus filter cartridges.

@ You can also try out the 'Insert filter' operation online. Visit the Knowledge Builder at www.jura.com.

Further information on the CLARIS plus filter cartridge can be found in Chapter 8, 'CLARIS plus filter cartridge – Water for perfect coffee'.

i Perform the 'Insert filter' operation without interruptions. This will ensure that your IMPRESSA always produces at its best.

Precondition: READY is displayed.

▸ Open the cover of the Rotary Switch.

▸ Keep the Rotary Switch pressed **until** RINSE appears on the display.

▸ Turn the Rotary Switch until FILTER – is displayed.

▸ Press the Rotary Switch to enter the programme item.
NO –

- ▸ Turn the Rotary Switch until YES ✓ is displayed.
- ▸ Press the Rotary Switch to confirm the setting.

  OK appears briefly on the display to confirm the setting.

  INSERT, the maintenance button lights up.
- ▸ Close the cover of the Rotary Switch.
- ▸ Remove the CLARIS plus filter cartridge from the Welcome Pack.
- ▸ Remove the water tank and empty it.
- ▸ Lift the cartridge holder and insert the filter cartridge into the water tank, applying slight pressure.
- ▸ Close the cartridge holder. It will click into place audibly.
- ▸ Fill the water tank with fresh, cold water and reinsert.

- ▸ Place a receptacle (at least 500 ml) under the frother.
- ▸ Press the maintenance button.

  FILTER RINSING. Water will flow out of the frother.

i You can interrupt rinsing of the filter at any time by pressing any button.

i The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Filter rinsing stops automatically after approx. 500 ml. HEATING appears on the display, then READY is displayed. The filter is now activated.

Determining water hardness and adjusting

ℹ However, if you are using the CLARIS plus filter cartridge and have activated it, you will not be able to adjust the water hardness.

The harder the water is, the more frequently the IMPRESSA needs to be descaled. It is therefore important to adjust the water hardness.

The water hardness can be adjusted on a continuous scale between 1° dH and 30° dH. This can also be deactivated, which means that the IMPRESSA will not let you know when it has to be descaled.
You can find out what the water hardness is by using the Aquadur® test strip supplied as standard.

- ▸ Hold the test strip briefly (for one second) under flowing water. Shake off the water.
- ▸ Wait for about one minute.
- ▸ You will then be able to read the degree of water hardness from the discolouration of the Aquadur® test strip and the description on the packaging.
  You can now adjust the water hardness.

Example: To change the water hardness from `16°dH` to `25°dH`, proceed as follows:
Precondition: `READY` is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** `RINSE` appears.
- ▸ Turn the Rotary Switch until `HARDNESS` is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  `16°dH`
- ▸ Turn the Rotary Switch until `25°dH` is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  `OK` appears briefly on the display to confirm the setting.
- ▸ Turn the Rotary Switch until `EXIT` is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  `READY` appears on the display.
- ▸ Close the cover of the Rotary Switch.

Adjusting the grinder

You can adjust the grinder continuously to suit the roast of your coffee.

CAUTION

If you adjust the fineness of grind when the grinder is not operating, the grinding wheel could be damaged.

- ▸ Only adjust the fineness of grind when the grinder is running.

The fineness of grind setting is correct if the coffee flows regularly from the coffee spout. A fine, thick crema is also formed.
Our recommendations:

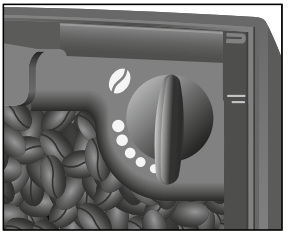

- Select a fine setting for a light roast.
  - If the fineness of grind setting is **too fine**, the coffee only drips from the coffee spout.

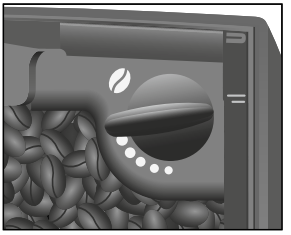

- Select a coarse setting for a darker roast.
  - If the fineness of grind is **too coarse** the coffee flows too quickly from the coffee spout.

Example: To change the fineness of grind **during** coffee preparation, proceed as follows:

- ▸ Open the cover of the bean container.
- ▸ Remove the aroma preservation cover.
- ▸ Place a cup under the coffee spout.
- ▸ Press the Coffee button.
  The grinder starts and 1 COFFEE is displayed. After this, the coffee strength is briefly displayed.

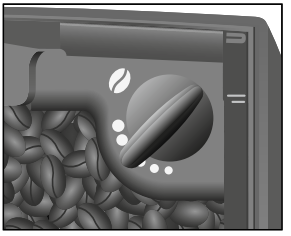

- ▸ Turn the fineness of grind switch to the desired position **while** the grinder is running.
  The coffee will be prepared and the fineness of grind is adjusted.
- ▸ Close the aroma preservation cover and the cover of the bean container.

Switching on

Precondition: Your IMPRESSA is switched on at the power switch and the indicator light is illuminated (standby).

⏻ ▸ Press the On/Off button to switch the IMPRESSA on.
HEATING is displayed.
PRESS RINSE, the maintenance button ⁂ lights up.

▸ Place a receptacle under the coffee spout.

⁂ ▸ Press the maintenance button.
RINSING, the machine rinses.
Preparation stops automatically. READY appears on the display.

Switching off (standby)

When you switch your IMPRESSA off, the spouts with which a coffee speciality or milk have been prepared are rinsed.

▸ Place a receptacle under the coffee spout and the frother.

⏻ ▸ Press the On/Off button.

ℹ When you prepare a milk product, but have not performed cappuccino cleaning, ⁂ CLEANING appears and the maintenance button ⁂ lights up. For ten seconds you can start the 'Clean cappuccino frother' procedure by pressing the maintenance button.

RINSING, the coffee spout is rinsed.
RINSE RIGHT, maintenance button ⁂ lights up.

⁂ ▸ Press the maintenance button.
RINSING appears on the display, and the right coffee spout is rinsed.
CAPPUCCINO RINSING
Cappuccino rinsing starts, and then stops automatically.
The IMPRESSA is switched off (standby), and the indicator light lights up.

ℹ When your IMPRESSA is switched off, a hissing noise may be audible. This is normal and does not have any effect on the machine.

3 Familiarising yourself with the control options

With the IMPRESSA, you can prepare an excellent coffee or milk speciality at the touch of a button. You also have the option of adjusting the coffee strength and temperature, as well as the amount of water to your personal taste.

This chapter will allow you to become familiar with all control options with the aid of examples. To familiarise yourself with your IMPRESSA, we recommend that you make a point of actively trying the facilities described in this chapter. You will find this is well worthwhile.

Learn how to perform the following:

- Preparation at the touch of a button
- One-off settings **before** and **while** your drink is being prepared.
- Adjusting the default amount of water to suit the cup size
- Permanent settings in programming mode

i You can stop the machine at any time while a coffee or milk speciality or hot water is being prepared. To do this, press any button.

@ If you prefer to familiarise yourself with your IMPRESSA in a fun way on the computer, the interactive Knowledge Builder tutorial programme can be found on the Internet at www.jura.com.

Preparation at the touch of a button

Prepare your favourite coffee speciality at the touch of a button.

All coffee specialities are prepared following this model at the touch of a button.

Preparing a coffee speciality at the touch of a button

Example: This is how to prepare **one** espresso.
Precondition: READY is displayed.

- ▸ Place an espresso cup under the coffee spout.
- ▸ Press the Espresso button.

  1 ESPRESSO and the coffee strength is then briefly displayed.

  The pre-set amount of water flows into the cup. Preparation stops automatically. READY appears on the display.

Preparing two coffee specialities at the touch of one button

Example: This is how to prepare **two** espressi.
Precondition: READY is displayed.

- ▸ Place two espresso cups under the coffee spout.
- ▸ Press the Espresso button twice (**within two seconds**).

  2 ESPRESSI appears on the display, the pre-set amount of water flows into the cups.

  Preparation stops automatically. READY appears on the display.

One-off settings before and during preparation

The coffee strength can be changed before preparation or during the grinding operation.
The following coffee strengths can be selected for 1 espresso, 1 coffee and 1 cappuccino:

- Mild
- Normal
- Strong

i The pre-set **amount of water** can be changed during the brewing operation by turning the Rotary Switch.

One-off settings before and during coffee preparation always follow this model. These settings are not saved.

Changing the coffee strength before preparation

Example: Proceed as follows to to prepare a **strong** cup of coffee.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Place a cup under the coffee spout.
- ▸ Turn the Rotary Switch until STRONG is displayed.
- ▸ Press the Coffee button **for as long as** STRONG is displayed.
  1 COFFEE / STRONG.
  The pre-set amount of water flows into the cup. Preparation stops automatically. READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Changing the amount of water during preparation

Example: Proceed as follows to prepare a 110 ML cup of coffee.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Place a cup under the coffee spout.
- ▸ Press the Coffee button.
  The grinding operation starts. 1 COFFEE and the coffee strength is then briefly displayed.
- ▸ Turn the Rotary Switch **during** the brewing operation until 110 ML is displayed.
  The set amount of water flows into the cup. Preparation stops automatically. READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Adjusting the default amount of water to suit the cup size

It is easy to make permanent settings for the amount of water for all coffee and milk specialities as well as hot water according to the cup size. As in the following example, adjust the amount of water once. Every time you prepare a drink in the future, this amount of water will be dispensed.

The permanent settings for adapting the amount of water to to the cup size for all coffee and milk specialities as well as hot water follow this model.

Example: To make **permanent** settings for the amount of water for an espresso, proceed as follows:
Precondition: READY is displayed.

- ▸ Place an espresso cup under the coffee spout.
- ▸ Press and **hold** the Espresso button.
  1 ESPRESSO appears on the display.
- ▸ **Hold** the Espresso button down until ENOUGH COFFEE ? appears.
- ▸ Release the Espresso button.
  Coffee preparation will start and the espresso will flow into the cup.
- ▸ Press any button as soon as enough espresso has flowed into the cup.
  Preparation stops automatically. OK appears briefly on the display. The set amount of water for an espresso will be permanently stored. READY appears on the display.

i You can alter these settings at any time by repeating the above procedure.

Permanent settings in programming mode

You can easily adjust your IMPRESSA to your personal coffee blends and specialities. You can navigate through the easy-tounderstand programme steps and make permanent settings by simply turning and pressing the Rotary Switch.

You can make the following settings with the Rotary Switch:

Programme item	Sub-item	Explanation
RINSE	C-CLEANING, FILTER (only when the filter is activated), CLEAN, C-RINSE, DE-SCALE (only when the filter is not activated), CLEAN	▸ Select the desired maintenance programme. If no action is taken, programming mode is exited automatically after approx. five seconds.
BUTTONS	SELECT BUTTON	▸ Select your settings for the coffee and milk specialities and hot water.
FILTER –	YES ✓ NO –	▸ Indicate whether you operate your IMPRESSA with or without a CLARIS plus filter cartridge.

Programme item	Sub-item	Explanation
HARDNESS (is only displayed when the filter is not activated)	INACTIVE, 1°dH – 30°dH	▸ Adjust the water hardness.
ENERGY	SAVE –, SAVE ✓	▸ Select an energy saving mode.
TIME	--:--	▸ Set the time.
UNIT ON	--:--	▸ Adjust the switch-on time.
OFF AFTER	INACTIVE, 0.5 HRS – 15 HRS	▸ Set the number of hours after which the IMPRESSA should switch off automatically.
INFO		▸ Keep track of all prepared coffee and milk specialities and view the maintenance status.
DISPLAY	ML/OZ, 24H/AM PM	▸ Select the unit of the amount of water and the time format.
LANGUAGE		▸ Select your language.
EXIT		▸ Exit programming mode.

Settings in programming mode always follow the same model.

Example: To change the strength of one espresso from STRONG to NORMAL proceed as follows:

Precondition: READY is displayed.

▸ Open the cover of the Rotary Switch.

▸ Keep the Rotary Switch pressed **until** RINSE appears.

▸ Turn the Rotary Switch until BUTTONS is displayed.

▸ Press the Rotary Switch to enter the programme item.
SELECT BUTTON

ℹ Next select the product button for which you would like to make settings. No product is prepared during this procedure.

ℹ To enter a setting for the double product, press the corresponding button twice within a period of two seconds.

▸ Press the Espresso button.
WATER

- ▸ Turn the Rotary Switch until STRENGTH is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  STRONG
- ▸ Turn the Rotary Switch until NORMAL is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  STRENGTH
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit the programme item.
  BUTTONS
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Query information and maintenance status

Under the programme item INFO, you can query the following information:

- Number of the prepared coffee and milk specialities and hot water
- Maintenance status and number of maintenance programmes performed (cleaning, descaling, filter change)
- Number of performed cappuccino cleaning operations

Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Press the Rotary Switch **until** RINSE appears.
- ▸ Turn the Rotary Switch until INFO is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  BUTTONS
- ▸ Press the Rotary Switch to enter the programme item.
  The **total number** of the prepared coffee specialities is displayed.

i The respective number of prepared products is displayed by pressing the individual buttons.

- ▸ Press the Rotary Switch to exit the programme item.
  BUTTONS

▸ Turn the Rotary Switch until CLEAN is displayed.

i Turn the Rotary Switch to switch to the performed descaling, filter change and cappuccino cleaning operations.

▸ Press the Rotary Switch to enter the programme item.
The number of performed cleaning operations appears on the display.

i The respective maintenance status can also be displayed in addition to the number of performed maintenance programmes. The filled out fields show the maintenance status. Once all fields are filled out, your IMPRESSA will request the respective maintenance programme.

▸ Press the Rotary Switch to exit the programme item.
CLEAN
▸ Turn the Rotary Switch until EXIT is displayed.
▸ Press the Rotary Switch to exit the programme item.
INFO
▸ Turn the Rotary Switch until EXIT is displayed.
▸ Press the Rotary Switch to exit programming mode.
READY
▸ Close the cover of the Rotary Switch.

4 Recipes

You can use your IMPRESSA to create coffee classics or extraordinary specialities in your home. You can find additional coffee recipes online at www.jura.com.

Further information on how to operate your IMPRESSA can be found in Chapter 3, 'Familiarising yourself with the control options'.

Cappuzino

Ingredients (for two people)

200 ml cold milk
2 strong Espressi
20 ml cinnamon syrup
Powdered cinnamon for decoration purposes

- Distribute the cinnamon syrup into Cappuccino cups.
- Place cup under the Cappuccino Frother and half fill with milk foam.
- Pour Espresso directly into the milk foam and sprinkle it with cinnamon powder.

Café Chocolat Blanc

Ingredients (for two people)

50 g white chocolate
2 Espressi
200 ml milk
Grated white chocolate for decoration purposes

- Froth milk in two decorative glasses with the Cappuccino Frother.
- Melt white chocolate in a bain marie.
- Prepare two Espressi, stir with the melted chocolate and pour into the milk foam.
- Sprinkle grated white chocolate over the drinks.

Winter's dream coffee

Ingredients (for two people)

- 2 strong Espressi
- 200 ml of hot cocoa
- 1 pinch of gingerbread seasoning
- 100 ml milk
- Sugar to suit personal taste
- 1-2 gingerbread cakes for decoration

- Prepare 2 Espressi.
- Stir Espresso with cocoa and gingerbread seasoning and distribute into two glasses.
- Froth the milk and add to the Espressos.
- Sprinkle with small pieces of gingerbread.

Latte Macchiato Frio

Ingredients (for two people)

- 2 cold Espressi
- 200 ml cold milk
- 1 small cup crushed ice
- 20 ml maple syrup
- Milk foam

- Prepare Espresso and allow to cool.
- Put cold milk, the maple syrup and crushed ice in a glass and mix.
- Add the cold Espresso.

5 Preparation at the touch of a button

In this chapter you will find out how to prepare coffee and milk specialities and hot water without making further settings.

Chapter 3, 'Familiarising yourself with the control options', will teach you how to adjust the settings to your personal preferences. Alternatively, you can use Chapter 6, 'Permanent settings in programming mode'.

i You can interrupt the machine at any time while a coffee or milk speciality or hot water is being prepared. To do this, press any button.

i During preparation, you can change the set amount by turning the Rotary Switch.

@ You can also try out the preparation of coffee specialities online. Visit the Knowledge Builder at www.jura.com.

Barista tips

A 'barista' is someone who is a professional at preparing espresso and coffee. The barista knows every coffee speciality and is a master at preparing perfect beverages. In conjunction with your JURA IMPRESSA, you too can achieve perfect results.

In addition to the simple preparation at the touch of a button, you can also adapt the coffee or espresso to suit your own individual taste. Various setting options are provided to this purpose. Give it a try:

- **Coffee strength**: The coffee strength can be changed before preparation or during the grinding operation by turning the Rotary Switch. This setting changes the coffee powder quantity. The larger the quantity of coffee powder which is used to make the coffee, the stronger and more intensive the coffee speciality will taste.
- **Fineness of grind**: In the IMPRESSA the coffee beans are freshly ground each time a coffee speciality is prepared. The fineness of grind has a considerable influence on the taste of the coffee. The fineness of grind is adjusted during grinding.

- **Temperature**: In programming mode on the IMPRESSA you can adjust the temperature of the coffee specialities. The temperature can affect the taste of the coffee and must be adapted to suit individual tastes and the type of coffee bean.
- **Height-adjustable coffee spout**: The height of the coffee spout can be adjusted on a continuous scale as required to suit the size of your coffee cups. The distance between the coffee spout and the edge of the cup should be as small as possible. This prevents coffee splashing on the machine and produces a fine, thick crema.

In addition remember the following barista tips:

- Store your coffee in a dry place. Oxygen, light, heat and moisture will spoil the coffee.
- Use only fresh, cold water so that the coffee aroma can optimally unfold.
- To enjoy perfect coffee, change the water every day.
- Pre-heat your cups.
- Use a teaspoon for sugar and do not use sugar lumps to ensure that the crema or milk foam are not spoilt.

Espresso

The classic coffee drink from Italy. There is a definite crema on the surface of the espresso.

Example: This is how to prepare an espresso.

▸ Place an espresso cup under the coffee spout.

☕ ▸ Press the Espresso button.

1 ESPRESSO and the coffee strength is then briefly displayed.

The pre-set amount of water flows into the cup. Preparation stops automatically. READY appears on the display.

To prepare two cups of espresso: Place two espresso cups under the coffee spout and press the espresso button ☕ twice (**within two seconds**).

Coffee

Example: This is how to prepare a coffee.

- ▸ Place a cup under the coffee spout.
- ▸ Press the Coffee button.

  1 COFFEE is displayed. After this, the coffee strength is briefly displayed.

  The pre-set amount of water flows into the cup. Preparation stops automatically. READY appears on the display.

To prepare two cups of coffee: Place two cups under the coffee spout and press the coffee button twice (**within two seconds**).

Cappuccino

Your IMPRESSA prepares a cappuccino at the touch of a button. It is not necessary to move the cup.

i The IMPRESSA C9 is equipped with a heating element for preparing coffee and steam. After preparing several cappuccinos within a short period of time, it is possible that the coffee only flows irregularly from the right-hand coffee spout. In this case allow your IMPRESSA a short break before making the next cappuccino.

Cappuccino with the Easy Cappuccino Frother

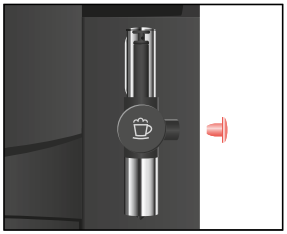

- ▸ Take the protective cover off the Easy Cappuccino Frother.
- ▸ Attach the milk pipe to the frother.
- ▸ Insert the other end of the milk pipe into a milk carton or connect it to a milk container.

- ▸ Place a cup under the frother.
- ▸ Press the Cappuccino button.

  CAPPUCCINO, the coffee strength is then briefly displayed.

  CAPPUCCINO, the milk foam is prepared.

  The operation stops automatically. Coffee preparation will now begin.

  Preparation stops automatically after reaching the pre-set amount of water. READY appears on the display.

To ensure that the Easy Cappuccino Frother works perfectly, it should be rinsed and cleaned regularly (refer to Chapter 7 'Maintenance – Easy Cappuccino Frother').

Cappuccino with the Professional Cappuccino Frother

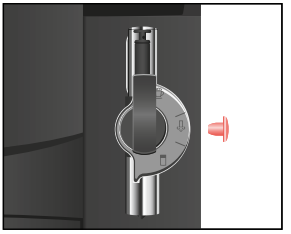

- ▸ Take the protective cover off the Professional Cappuccino Frother.
- ▸ Attach the milk pipe to the frother.
- ▸ Insert the other end of the milk pipe into a milk carton or connect it to a milk container.

- ▸ Place a cup under the frother.
- ▸ Turn the selection lever of the frother to the milk foam position.
- ▸ Press the Cappuccino button.

  CAPPUCCINO, the coffee strength is then briefly displayed.

  CAPPUCCINO, the milk foam is prepared.

  The operation stops automatically. Coffee preparation will now begin.

  Preparation stops automatically after reaching the pre-set amount of water. READY appears on the display.

To ensure that the Professional Cappuccino Frother works perfectly, it should be rinsed and cleaned regularly (refer to Chapter 7 'Maintenance – Professional Cappuccino Frother').

Pre-ground coffee

You can choose a second coffee blend with the filler funnel for pre-ground coffee.

- Never add more than two level measuring spoons of pre-ground coffee.
- Use pre-ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- If you did not fill the machine with a sufficient amount of pre-ground coffee, NOT ENOUGH PRE-GROUND is displayed and the IMPRESSA stops operation.
- The desired coffee speciality must be prepared within approx. one minute after filling with the pre-ground coffee. Otherwise, the IMPRESSA stops the operation and is ready to use again.

All coffee specialities with pre-ground coffee are prepared following this model.

Example: This is how to prepare a cup of coffee using pre-ground coffee.

- ▸ Place a cup under the coffee spout.
- ▸ Press the Pre-ground coffee button.
  FILL PRE-GROUND, then READY are displayed.
- ▸ Open the cover of the filler funnel for pre-ground coffee.
- ▸ Place one level measuring spoon of pre-ground coffee into the filler funnel.
- ▸ Close the cover of the filler funnel for pre-ground coffee.
- ▸ Press the Coffee button.
  1 COFFEE is displayed. After this, PRE-GROUND is briefly displayed.
  Preparation stops automatically after reaching the pre-set amount of water.
  READY

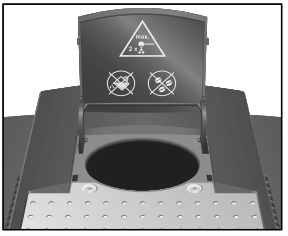

Foaming milk with the Easy Cappuccino Frother

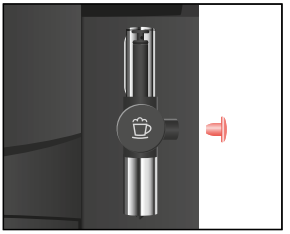

- ▸ Take the protective cover off the Easy Cappuccino Frother.
- ▸ Attach the milk pipe to the frother.
- ▸ Insert the other end of the milk pipe into a milk carton or connect it to a milk container.

- ▸ Place a cup under the frother.
- ▸ Press the milk foam button.

  HEATING

  READY appears as soon as the IMPRESSA has heated up.
- ▸ Press the milk foam button once more.

  MILK, the milk foam is being prepared.

  Preparation stops automatically.

  READY

i You can prepare more milk foam within about 40 seconds.

To ensure that the Easy Cappuccino Frother works perfectly, it should be rinsed and cleaned regularly (refer to Chapter 7 'Maintenance – Easy Cappuccino Frother').

Foaming and heating milk with the Professional Cappuccino Frother

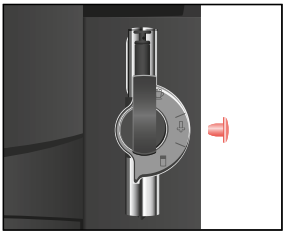

- ▸ Take the protective cover off the Professional Cappuccino Frother.
- ▸ Attach the milk pipe to the frother.
- ▸ Insert the other end of the milk pipe into a milk carton or connect it to a milk container.

- ▸ Place a cup under the frother.
- ▸ Turn the selection lever of the frother to the milk foam position.

ℹ If you want to **heat the milk**, set the selection lever of the frother to the milk position.

- ▸ Press the milk foam button.
  HEATING
  READY appears as soon as the IMPRESSA has heated up.
- ▸ Press the milk foam button once more.
  MILK, the milk foam is being prepared.
  Preparation stops automatically.
  READY

ℹ You can prepare more milk foam or hot milk within about 40 seconds.

To ensure that the Professional Cappuccino Frother works perfectly, it should be rinsed and cleaned regularly (refer to Chapter 7 'Maintenance – Professional Cappuccino Frother').

Hot water

Precondition: READY is displayed.

ℹ Attach the hot water nozzle to the Connector System© for heating water.

CAUTION

There is a danger of scalding from hot water splashes.
- ▸ Avoid direct contact with skin.

- ▸ Place a cup under the nozzle.
- ▸ Press the hot water button.
  WATER, hot water flows into the cup.
  Preparation stops automatically after reaching the pre-set amount of water.
  READY

6 Permanent settings in programming mode

Products

With the BUTTONS programme item you can enter individual settings for all coffee and milk specialities as well as hot water.

The following permanent settings can be entered for coffee and milk specialities and hot water:

Product	Amount	Coffee strength	Temp.
1 espresso	15 ML – 240 ML	MILD, NORMAL, STRONG	NORMAL, HIGH
2 espressi	15 ML – 240 ML (per cup)	–	NORMAL, HIGH
1 coffees	15 ML –240 ML	MILD, NORMAL, STRONG	NORMAL, HIGH
2 coffees	15 ML – 240 ML (per cup)	–	NORMAL, HIGH
Cappuccino	Amount of milk: 3 SEC – 120 SEC Amount of water: 15 ML – 240 ML	MILD, NORMAL, STRONG	NORMAL, HIGH
Milk foam	3 SEC – 120 SEC	–	–
Hot water	15 ML – 450 ML	–	–

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the amount of milk of one cappuccino from 14 SEC to 20 SEC, the amount of water from 60 ML to 50 ML and the coffee strength from NORMAL to STRONG.

Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until BUTTONS is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  SELECT BUTTON

ℹ Next select the product button for which you would like to make settings. No product is prepared during this procedure.

ℹ To change a setting for a double product, press the corresponding button twice within a period of two seconds.

- ▸ Press the Cappuccino button.
  MILK
- ▸ Press the Rotary Switch to enter the programme item.
  14 SEC
- ▸ Turn the Rotary Switch until 20 SEC is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  MILK
- ▸ Turn the Rotary Switch until WATER is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  60 ML
- ▸ Turn the Rotary Switch until 50 ML is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display.
  WATER
- ▸ Turn the Rotary Switch until STRENGTH is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  NORMAL
- ▸ Turn the Rotary Switch until STRONG is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display.
  STRENGTH
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit the programme item.
  BUTTONS
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Resetting the products to works settings

You can reset the values of all products individually to the works setting.

Example: Proceed as follows to reset the values of 1 espresso and 2 espressi to the works setting.
Precondition: The IMPRESSA must be switched off (standby).

- ▸ Press the Rotary Switch and the Espresso button for two seconds at the same time until OK appears.
  The values of 1 espresso and 2 espressi are then reset to the works setting. The IMPRESSA must be switched off (standby).

Energy saving mode (E.S.M.©)

An energy saving mode permanent setting can be made with the ENERGY programme item (E.S.M.©):

- SAVE –
  - All coffee products as well as hot water can be prepared without having to wait.
  - The machine heats up before preparing cappuccino or milk.
- SAVE ✓
  - Approx. 5 minutes after the last preparation the IMPRESSA switches to the energy-saving temperature and is not ready for use.
  - Before coffee, hot water or milk can be prepared, the machine heats up.

Example: Proceed as follows to change the energy saving mode from SAVE – to SAVE ✓.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until ENERGY – is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  SAVE –
- ▸ Turn the Rotary Switch until SAVE ✓ is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  ENERGY ✓

- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Time

If the machine is disconnected from the mains, the time has to be reset.

Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until TIME is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  --:--
- ▸ Turn the Rotary Switch to set the hour.
- ▸ Press the Rotary Switch to confirm the hour setting.
- ▸ Turn the Rotary Switch to set the minutes.
- ▸ Press the Rotary Switch to confirm the minute setting.
  OK appears briefly on the display to confirm the setting.
  TIME
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Programmable switch-on time

When a switch-on time has been set, the IMPRESSA switches on every day at the set time and heats up.

- The programmable switch-on time can only be set when the time has been set.
- The programmable switch-on of your IMPRESSA only works when the machine is switched on at the power switch (standby).

Example: To set the programmable switch-on time to 07:30, proceed as follows.

Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.

- ▸ Turn the Rotary Switch until UNIT ON appears.
- ▸ Press the Rotary Switch to enter the programme item.
  --:--
- ▸ Turn the Rotary Switch until 07:00 is displayed.
- ▸ Press the Rotary Switch to confirm the hour setting.
- ▸ Turn the Rotary Switch until 07:30 is displayed.
- ▸ Press the Rotary Switch to confirm the minute setting.
  OK appears briefly on the display to confirm the setting.
  UNIT ON
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit the programme item.
  READY
- ▸ Close the cover of the Rotary Switch.

Automatic switch-off

By instructing your IMPRESSA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your IMPRESSA switches off automatically after a pre-set period has elapsed following the last use of the machine.

i The programmable switch-off time can be adjusted between 0.5 and 15 hours or deactivated.

Example: Proceed as follows to change the automatic switch-off time from 5 HRS to 2 HRS.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until OFF AFTER is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  5 HRS
- ▸ Turn the Rotary Switch until 2 HRS is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  OFF AFTER
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Unit amount of water/ Time format

You can change the unit of the amount of water from 'ml' to 'oz' and the time format to '24 HRS' or 'AM/PM' .

Example: To change the unit for the amount of water from ML to OZ, proceed as follows.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until DISPLAY is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  ML/OZ

i To change the time format, turn the Rotary Switch until 24H/ AM PM is displayed.

- ▸ Press the Rotary Switch to enter the programme item.
  ML
- ▸ Turn the Rotary Switch until OZ is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  ML/OZ
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit the programme item.
  DISPLAY
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  READY
- ▸ Close the cover of the Rotary Switch.

Language

The language of your IMPRESSA is set with this programme item.

Example: To change the language from ENGLISH to DEUTSCH, proceed as follows.
Precondition: READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Turn the Rotary Switch until LANGUAGE is displayed.
- ▸ Press the Rotary Switch to enter the programme item.
  ENGLISH

- ▸ Turn the Rotary Switch until DEUTSCH is displayed.
- ▸ Press the Rotary Switch to confirm the setting.
  OK appears briefly on the display to confirm the setting.
  SPRACHE
- ▸ Turn the Rotary Switch until EXIT is displayed.
- ▸ Press the Rotary Switch to exit programming mode.
  BEREIT
- ▸ Close the cover of the Rotary Switch.

7 Maintenance

Your IMPRESSA has the following integrated maintenance programmes:

- Rinse machine
- Filter change
- Clean machine
- Descale machine
- Rinse frother
- Clean frother

ℹ Clean or descale the machine or change the filter whenever the appropriate indicator lights up.

Maintenance tips

To ensure that you get many years of reliable service out of your IMPRESSA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

You should proceed as follows:

- Empty the coffee grounds container and the drip tray. Rinse them with warm water.
- Rinse the water tank with clean water.
- Dismantle and rinse the frother (See Chapter 'Maintenance – Rinsing the frother').
- Wipe the surface of the machine with a damp cloth.

Rinse machine

When the IMPRESSA is switched on, a prompt to perform a rinse operation automatically appears after heating. When the IMPRESSA is switched off, each spout which was used for preparation is rinsed.

You can initiate the rinse operation manually at any time.

Precondition: READY is displayed.

▸ Place a receptacle under the coffee spout.

▸ Open the cover of the Rotary Switch.

▸ Keep the Rotary Switch pressed **until** RINSE appears.

▸ Press the Rotary Switch to enter the programme item.
C CLEANING

▸ Turn the Rotary Switch until RINSE is displayed.

▸ Press the Rotary Switch to initiate the rinse operation.
RINSING
Rinsing stops automatically and your IMPRESSA is then ready for use.
▸ Close the cover of the Rotary Switch.

Filter change

After 50 litres of water have flowed through, or after two months, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.

If the CLARIS plus filter cartridge is not activated, you will not be prompted to change the filter.

@ You can also try out 'changing the filter' online. Visit the Knowledge Builder at www.jura.com.

Change following a prompt

To change the CLARIS plus filter cartridge when prompted to do so by your IMPRESSA, proceed as follows:

Precondition: READY / FILTER is displayed and the maintenance button lights up.

▸ Press the maintenance button.
CHANGE
▸ Remove the water tank and empty it.
▸ Open up the cartridge holder and remove the old CLARIS plus filter cartridge.
▸ Insert a new CLARIS plus filter cartridge into the water tank, pressing it slightly.
▸ Close the cartridge holder. It will click into place audibly.
▸ Fill the water tank with fresh, cold water and reinsert.

▸ Place a receptacle (at least 500 ml) under the frother.

If you are using the Professional Cappuccino Frother, set the selection lever of the frother to the steam position.

▸ Press the maintenance button.
FILTER RINSING – Water will flow out of the frother.

ℹ You can interrupt filter rinsing at any time. To do this, press any button.

ℹ The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Filter rinsing stops automatically after approx. 500 ml. The IMPRESSA heats up and is once again ready to use.

Manual filter change

You can initiate the 'Changing the filter' operation manually.

Precondition: The filter is activated and READY is displayed.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Press the Rotary Switch to enter the programme item.
  CLEANING
- ▸ Turn the Rotary Switch until FILTER is displayed.
- ▸ Press the Rotary Switch.
  CHANGE
- ▸ Close the cover of the Rotary Switch.
- ▸ Continue with the **second** prompt to take action (indicated by a ▸), as is described under **'Change following a prompt'**.

Clean machine

After 200 coffee preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▸ Use only original JURA care products.

ℹ The cleaning programme only lasts about 20 minutes.

ℹ Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.

ℹ JURA cleaning tablets are available from stockists.

@ You can also try out the 'clean machine' operation online. Visit the Knowledge Builder at www.jura.com.

Cleaning following a prompt

Precondition: READY / CLEAN is displayed and the maintenance button ⁂ lights up.

⁂ ▸ Press the maintenance button.
EMPTY TRAY
▸ Empty the drip tray and coffee grounds container and put them back into the machine.
PRESS RINSE, the maintenance button ⁂ lights up.
▸ Place a receptacle under the coffee spout and the frother.

⁂ ▸ Press the maintenance button.
CLEANING, water flows from both coffee spouts.
The process is interrupted, ADD TABLET.
▸ Open the cover of the filler funnel for pre-ground coffee.

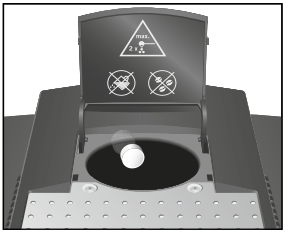

▸ Insert a JURA cleaning tablet into the filler funnel.
▸ Close the cover of the filler funnel.
⁂ ▸ Press the maintenance button.
CLEANING, water flows from both coffee spouts several times.
The process is interrupted – EMPTY TRAY.
▸ Empty the drip tray and coffee grounds container and put them back into the machine.
The cleaning operation is now complete. The IMPRESSA is ready for use again.

Manual cleaning

You can initiate the 'Cleaning the machine' operation manually.

Precondition: READY is displayed.

▸ Open the cover of the Rotary Switch.
⏻ ▸ Keep the Rotary Switch pressed **until** RINSE appears.
⏻ ▸ Press the Rotary Switch to enter the programme item.
CLEANING
◯ ▸ Turn the Rotary Switch until CLEAN is displayed.
⏻ ▸ Press the Rotary Switch.
EMPTY TRAY
▸ Close the cover of the Rotary Switch.
▸ Continue with the **second** prompt to take action (indicated by a ▸), as is described under **'Cleaning following a prompt'**.

Descale machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the degree of hardness of your water.

CAUTION

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▸ Avoid contact with the skin or eyes.
- ▸ Rinse the descaling agent off with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▸ Use only original JURA care products.

CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▸ Allow the descaling program to run to the end.

CAUTION

If the descaling agent comes into contact with sensitive surfaces, damage cannot be ruled out.

- ▸ Clean up any splashes immediately.

- The descaling programme lasts approx. 45 minutes.
- JURA descaling tablets are available from stockists.
- If you use a CLARIS plus filter cartridge and this is activated, you will not be prompted to change the filter.

@ You can also try out the 'Descaling the machine' operation online. Visit the Knowledge Builder at www.jura.com.

Descaling following a prompt

Precondition: READY / DE-SCALE is displayed and the maintenance button lights up.

- ▸ Press the maintenance button.

  EMPTY TRAY
- ▸ Empty the drip tray and coffee grounds container and put them back into the machine.

  AGENT IN TANK
- ▸ Remove the water tank and empty it.

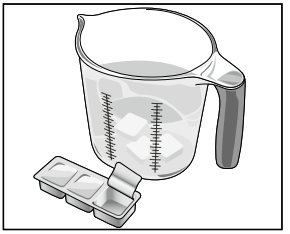

- ▸ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a container that holds 500 ml of water. This may take several minutes.
- ▸ Pour the solution into the empty water tank and insert it in the machine.

  AGENT IN TANK, the maintenance button ⁂ lights up.
- ▸ Remove the frother.
- ▸ Place a receptacle (at least 500 ml) under the Connector System©.

⁂ ▸ Press the maintenance button.

  DE-SCALING

  This causes water to flow out of the Connector System© several times. The maintenance button blinks during the descaling operation.

  The operation stops automatically, EMPTY TRAY.
- ▸ Empty the receptacle under the Connector System©.
- ▸ Empty the drip tray and coffee grounds container and put them back into the machine.

  FILL WATER TANK
- ▸ Remove the water tank and rinse it thoroughly.
- ▸ Fill the water tank with fresh, cold mains water and reinsert.

  PRESS RINSE, the maintenance button ⁂ lights up.
- ▸ Replace the frother.
- ▸ Place a receptacle under the frother.

⁂ ▸ Press the maintenance button.

  DE-SCALING, water flows out of the frother.

  The operation stops automatically, EMPTY TRAY.
- ▸ Empty the drip tray and coffee grounds container and put them back into the machine.

  The descaling operation is now complete. Your IMPRESSA heats up and is once again ready to use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Manual descaling

You can initiate the 'Descaling the machine' operation manually.

Precondition: READY is displayed and the filter is not activated.

- ▸ Open the cover of the Rotary Switch.
- ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Press the Rotary Switch to enter the programme item.
  C CLEANING
- ▸ Turn the Rotary Switch until DE-SCALE is displayed.
- ▸ Press the Rotary Switch.
  EMPTY TRAY
- ▸ Close the cover of the Rotary Switch.
- ▸ Continue with the **second** prompt to take action (indicated by a ▸), as is described under **'Descaling following a prompt'**.

Rinsing the Easy Cappuccino Frother

To ensure that the Easy Cappuccino Frother works perfectly, you should rinse it with water whenever you have prepared some milk.

Rinsing the Easy Cappuccino Frother after a prompt

Your IMPRESSA will prompt you to rinse the Easy Cappuccino Frother 10 minutes after you have prepared milk.

Precondition: CAPPUCCINO RINSE is displayed and the maintenance button ⁂ lights up.

- ▸ Place a receptacle under the Easy Cappuccino Frother.
- ▸ Press the maintenance button.
  CAPPUCCINO RINSING, the frother is rinsed.
  Preparation stops automatically. READY appears on the display.

Rinsing the Easy Cappuccino Frother – starting manually

You can initiate the 'Rinsing the frother' operation manually.

Precondition: READY is displayed.

- ▸ Place a receptacle under the Easy Cappuccino Frother.
- ▸ Open the cover of the Rotary Switch.
- ⏻ ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ⏻ ▸ Press the Rotary Switch to enter the programme item. C CLEANING
- ▸ Turn the Rotary Switch until C CLEANING is displayed.
- ⏻ ▸ Press the Rotary Switch.
  CAPPUCCINO RINSING, the frother is rinsed.
  Preparation stops automatically. READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Cleaning the Easy Cappuccino Frother

To ensure that the Easy Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▸ Use only original JURA care products.

ℹ The JURA Auto Cappuccino Cleaner is available from stockists.

ℹ The IMPRESSA will not prompt you to clean the frother.

@ You can also try out the 'Cleaning the cappuccino frother' operation online. Visit the Knowledge Builder at www.jura.com.

Precondition: READY is displayed.

- ▸ Remove the milk pipe from the milk carton/bottle or the milk container.
- ▸ Open the cover of the Rotary Switch.
- ⏻ ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ⏻ ▸ Press the Rotary Switch to enter the programme item. C CLEANING
- ⏻ ▸ Press the Rotary Switch.

CAPPUCCINO CLEANER

- ▸ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Auto Cappuccino Cleaner.
- ▸ Immerse the milk pipe in the receptacle.
- ▸ Place another receptacle under the frother.
- ⁂ ▸ Press the maintenance button.

  CLEANING, the frother and pipe are cleaned. The operation stops automatically.

  WATER FOR CAPPUCCINO
- ▸ Rinse the receptacle thoroughly, fill it with approx. 250 ml of fresh water and immerse the milk pipe in the water.
- ▸ Empty the other receptacle and place it under the frother once more.
- ⁂ ▸ Press the maintenance button.

  CLEANING, the frother and pipe are rinsed with fresh water. The operation stops automatically.

  READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Disassembling and rinsing the Easy Cappuccino Frother

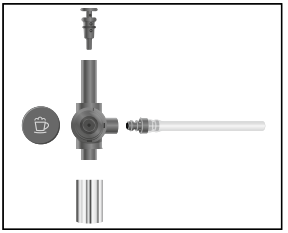

- ▸ Carefully remove the frother from the Connector System© by twisting slightly.
- ▸ Dismantle the frother completely.
- ▸ Rinse all the frother parts thoroughly under running water.
- ▸ Re-assemble the frother.

i Ensure that the individual parts are correctly and firmly attached to one another to ensure optimum function of the frother.

- ▸ Firmly attach the frother to the Connector System©.

Rinsing the Professional Cappuccino Frother

To ensure that the Professional Cappuccino Frother works perfectly, you should rinse it with water whenever you have prepared some milk.

Rinsing the Professional Cappuccino Frother after a prompt

Your IMPRESSA will prompt you to rinse the Professional Cappuccino Frother 10 minutes after you have prepared milk.

Precondition: CAPPUCCINO RINSE is displayed and the maintenance button ⁂ lights up.

- ▸ Place a receptacle under the Professional Cappuccino Frother.
- ⁂ ▸ Press the maintenance button.
  CAPPUCCINO RINSING, the frother is rinsed.
  Preparation stops automatically. READY appears on the display.

Rinsing the Professional Cappuccino Frother – starting manually

You can initiate the 'Rinsing the frother' operation manually.

Precondition: READY is displayed.

- ▸ Place a receptacle under the Professional Cappuccino Frother.
- ▸ Open the cover of the Rotary Switch.
- ⁂ ▸ Keep the Rotary Switch pressed **until** RINSE appears.
- ▸ Press the Rotary Switch to enter the programme item.
  C CLEANING
- ▸ Turn the Rotary Switch until C CLEANING is displayed.
- ▸ Press the Rotary Switch.
  CAPPUCCINO RINSING, the frother is rinsed with fresh water.
  Preparation stops automatically. READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Cleaning the Professional Cappuccino Frother

To ensure that the Professional Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▸ Use only original JURA care products.

ℹ The JURA Auto Cappuccino Cleaner is available from stockists.

ℹ The IMPRESSA will not prompt you to clean the frother.

@ You can also try out the 'Cleaning the cappuccino frother' operation online. Visit the Knowledge Builder at www.jura.com.

Precondition: READY is displayed.

▸ Open the cover of the Rotary Switch.

▸ Keep the Rotary Switch pressed **until** RINSE appears.

▸ Press the Rotary Switch to enter the programme item.
C CLEANING

▸ Press the Rotary Switch.
CAPPUCCINO CLEANER

▸ Remove the milk pipe from the milk carton/bottle or the milk container.

▸ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Auto Cappuccino Cleaner.

▸ Immerse the milk pipe in the receptacle.

▸ Turn the selection lever of the frother to the milk foam position or milk.

▸ Place another receptacle under the frother.

▸ Press the maintenance button.
CLEANING, the frother and pipe are cleaned. The operation stops automatically.
WATER FOR CAPPUCCINO

▸ Rinse the receptacle thoroughly, fill it with approx. 250 ml of fresh water and immerse the milk pipe in the water.

- ▸ Empty the other receptacle and place it under the frother once more.
- ▸ Press the maintenance button.

  CLEANING, the frother and pipe are rinsed with fresh water.

  Preparation stops automatically. READY appears on the display.
- ▸ Close the cover of the Rotary Switch.

Disassembling and rinsing the Professional Cappuccino Frother

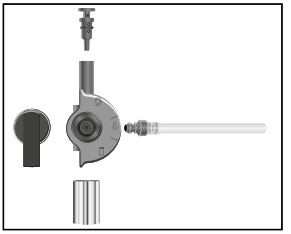

- ▸ Carefully remove the frother from the Connector System© by twisting slightly.
- ▸ Dismantle the frother completely.
- ▸ Rinse all the frother parts thoroughly under running water.
- ▸ Re-assemble the frother.

ℹ Ensure that the individual parts are correctly and firmly attached to one another to ensure optimum function of the frother.

- ▸ Firmly attach the frother to the Connector System©.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These residues may negatively affect the coffee results. For this reason clean the bean container from time to time.

⚠ **WARNING**

Danger of injury to the fingers when the grinder is running.

- ▸ Switch the machine off with the on/off button ⏻ before performing any work on the grinder.
- ▸ Switch the machine off at the power switch.

Precondition: READY / FILL BEANS is displayed.

- ⏻ ▸ Switch your machine off with the On/Off button.
- ▸ Switch your machine off at the power switch.
- ▸ Open the cover of the bean container and remove the aroma preservation cover.
- ▸ Clean the bean container with a soft, dry cloth.

- Fill the bean container with coffee beans, then close the aroma preservation cover and the bean container cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- Remove the water tank.
- If you use a CLARIS plus filter cartridge, remove this.
- Descale the tank with a mild, commercially available descaling agent in accordance with the instructions of the manufacturer.
- Rinse out the water tank thoroughly.
- If you use a CLARIS plus filter cartridge, insert this again.
- Fill the water tank with fresh, cold water and reinsert.

8 CLARIS plus filter cartridge – Water for perfect coffee

Use of a CLARIS plus filter cartridge guarantees you freshly filtered, delicious-tasting coffee and hot water at all times. Designed specially for JURA coffee machines, it has a neutral pH value and is placed directly in the water tank.
Unlike other water filtering systems for domestic use, CLARIS plus works according to the professional up-flow principle. In practical terms this means that only the precise amount of water required for a given beverage is drawn in, and this is filtered directly before use.

No more descaling

If you use the filter cartridge regularly, you will be able to save yourself the time-consuming effort of regular descaling. Your coffee machine will also reward you with a longer service life. Use a CLARIS plus filter cartridge if the water hardness is higher than 10° dH. You can determine the water hardness before using your JURA coffee machine for the first time with the Aquadur® test strip supplied with the machine.

Easy to operate

Inserting the CLARIS plus filter cartridge could not be easier. A description is contained in Chapter 2 'Preparing and using for the first time – Using and activating filter'.

Economical use

After 50 litres of water have been dispensed or after two months at the latest, the filter capacity will be reached. The cartridge must then be replaced. Your JURA coffee machine will prompt you to change the filter. This procedure is described in detail in Chapter 7 'Maintenance – Changing the filter following a prompt'.

You can return used filter cartridges to the stockist.

Maintenance and storage

The CLARIS plus filter cartridge only needs to be removed from the water tank if you are away for a prolonged period of time or if you wish to clean or descale the tank using a conventional product.

If you do plan to be away for some time (e.g. on holiday), we recommend that you store the filter cartridge as follows: Remove the cartridge from the water tank. Place it in a glass with about two centimetres of water and put it in the refrigerator.

We recommend that you prepare about half a litre of water through the machine before starting to make coffee again. The water could be discoloured, but this is not harmful to your health.

Pictures on the next few pages:

1 Water – always pleasant and freshly filtered.

2 CLARIS plus filter cartridges do not require any accessories and do not take up any extra space. They can be inserted directly into the water tank.

3 4 Water for perfect coffee specialities.

5 The professional up-flow principle: Only the precise amount of water required for a given beverage is drawn in, and this is filtered directly before use.

6 Stainless steel pipes in the heater element: With CLARIS plus (left) you can omit the time-consuming descaling operation (right).

7 The following substances are filtered out through the interaction with organic materials: calcium (Ca), chlorine (Cl), lead (Pb), copper (Cu), aluminium (Al).

1

2

3

5

6

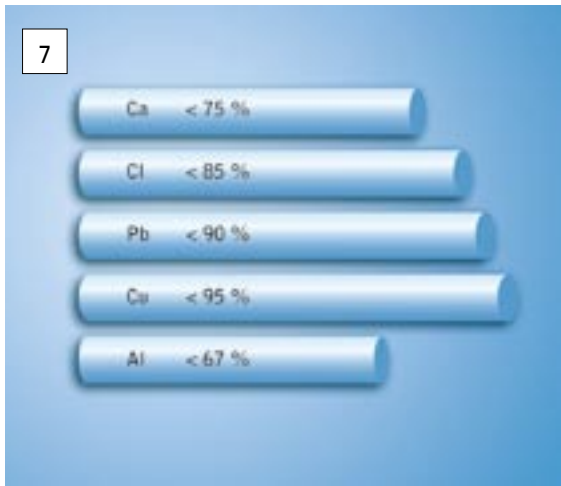

7

9 'The milk makes the difference'

Coffee specialities are taking the entire planet by storm. Up until a few years ago, classics, such as Espresso and Café Crème were the most popular choices. Today, Cappuccino, Latte Macchiato & co. have well surpassed them.

Trendy specialities with milk

More and more often, one finds milk among the ingredients of the trendy specialities. It doesn't matter whether whole milk or skim milk is used. It isn't the fat content which is crucial for the wonderful foam, but the protein. Heated or frothed, as cream or whipped cream, no other natural product is combined with coffee as often or with as much pleasure as milk. There is a wide variety of alternatives available to allergy sufferers as well: goat/sheep milk, rice milk or soy milk.

State-of-the-art technology

State-ofthe-art technology and ingenious Cappuccino nozzles allow you to delve into the multi-faceted world of coffee specialities with every IMPRESSA. Here, the milk is not heated to above 75 °C because this is the only way that the inimitable fine foam can be fully developed.

Thanks to the variable brewing unit, which can prepare between 5 and 16 grams of coffee powder under ideal conditions, you can make sure that the tastes of the coffee and milk are harmoniously balanced. Simply allow your imagination to run free in creating new recipes and add flavour and fineness to your personal favourite coffee specialities according to your mood.

Frothing as done by a professional

Make sure you try out the secret Barista tip: Because milk can form a vortex on the rough surface of a stainless steel pot especially well, perfect foam can be formed in these receptacles. And the professional also knows what must also be given special attention: Regularly and thoroughly clean the Cappuccino nozzle, rinse out the milk container well every evening and store the milk in the refrigerator overnight.

10 Accessories and Service

Machine accessories – extend your coffee horizon

1 Coffee specialities made with milk are very fashionable these days. The Connector System© and the wide range of accessories open the door to the world of trendy drinks. Any accessories that do not come supplied with your IMPRESSA can be obtained from authorised stockists.

Professional Cappuccino Frother

2 Cappuccino, Latte Macchiato at the touch of a button – nothing could be easier with the Professional Cappuccino Frother. It draws milk in directly from the container, heats it up, froths it and delivers perfect milk foam for the ultimate Cappuccino experience, or warm milk for your Latte Macchiato.

Easy Cappuccino Frother

3 The Easy Cappuccino Frother provides milk foam at the touch of a button. It is compatible with the Connector System©.
When steam is drawn, a negative pressure is created and this draws milk from the container. Every Cappuccino is made successfully in this way.

Stainless steel vacuum milk container

4 The high-quality stainless steel vacuum milk container holds 0.6 litres and keeps the milk cool throughout the day.

Deluxe milk container

5 In the attractive chrome steel design, the milk is suitably attired. The container holds 0.6 litres.

Care products

6 Original JURA care products are optimally tailored to the maintenance programmes. You should therefore use only original JURA care products. Your IMPRESSA will thank you for it.

CLARIS plus filter cartridge

7 The CLARIS plus filter cartridge was developed specially for JURA coffee machines. It is placed directly into the water tank. CLARIS plus works according to the professional up-flow principle.

Further information on this subject can be found in Chapter 8, 'CLARIS plus filter cartridge – Water for perfect coffee'.

Cleaning tablets

8 Your IMPRESSA machine comes with an integrated cleaning programme. The original JURA cleaning tablets are specifically tailored for the machine and optimally dissolve accumulated coffee oils.

Descaling tablets

9 Scale is the biggest enemy of all household appliances that involve the use of mains water. JURA has developed a descaling tablet for the IMPRESSA which removes scale and at the same time is easy on your machine.

Auto-Cappuccino Cleaner

10 Clean your Professional Cappuccino Frother and Easy-Cappuccino Frother with the original Auto-Cappuccino Cleaner from JURA. This will ensure that it is 100% clean.

Service

11 Competent, high-quality service is a top priority as far as JURA is concerned, irrespective of whether it is provided by the glassy service factory of the Swiss parent company or in the authorised JURA service centres all around the world.

12 Every IMPRESSA service is preceded by an electronically controlled diagnostic run.

13 Service work is performed competently and professionally by JURA's trained technicians.

2

3

4

5

7

claris
IMPRESSA
Filtercartridge
Filter Cartridge
Cartouche filtrante
Cartuccia filtro
Filterpatroon
Cartucho de filtro
Filtro-patron
Cartucho de filtro
IMPRESSA

8

10

9

SERVICE-FABRIK

12

13

11 Display messages

Message	Cause/Result	Action
FILL WATER TANK	The water tank is empty. You cannot prepare any coffee or milk specialities or hot water.	▸ Fill the water tank (See Chapter 2, 'Preparing and using for the first time – Filling the water tank')
EMPTY GROUNDS	The coffee grounds container is full. You cannot prepare any coffee specialities, but you can prepare hot water or milk.	▸ Empty the coffee grounds container and the drip tray.
TRAY MISSING	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any coffee specialities or hot water or milk products.	▸ Insert the drip tray.
PRESS RINSE	The IMPRESSA is prompting you to rinse it.	▸ Press the maintenance button to start rinsing.
FILL BEANS	The bean container is empty. You cannot prepare any coffee specialities, but you can prepare hot water or milk.	▸ Fill the bean container (See Chapter 2, 'Preparing and using for the first time – Filling the bean container')
CAPPUCCINO RINSE	The IMPRESSA is prompting you to start cappuccino rinsing.	▸ Press the maintenance button to start cappuccino rinsing.
READY / CLEAN	After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.	▸ Clean the machine (See Chapter 7, 'Maintenance – Cleaning the machine')
READY / DE-SCALE	The IMPRESSA is prompting you to descale it.	▸ Descale the machine (See Chapter 7, 'Maintenance – Descaling the machine')
READY / FILTER	After 2 months or when 50 litres of water have flowed through the filter, its capacity is reached.	▸ Replace the CLARIS plus filter cartridge (See Chapter 7 'Maintenance – Changing the filter').

Message	Cause/Result	Action
NOT ENOUGH PRE-GROUND	There is too little pre-ground coffee in the filler funnel. The IMPRESSA stops the operation.	▸ The next time you make coffee use more pre-ground coffee (refer to Chapter 5, 'Preparation at the touch of a button – Pre-ground coffee').
TOO HOT	The system is too hot to start a maintenance programme.	▸ Prepare a coffee speciality or hot water.

12 Troubleshooting

Problem	Cause/Result	Action
Grinder is making a very loud noise.	There are some foreign bodies in the grinder.	▸ Contact Customer Support in your country. You will find the telephone number in Chapter 16, 'JURA contact details'
Insufficient foam is produced when the milk is foamed or milk sprays from the cappuccino frother.	The cappuccino frother is dirty.	▸ Rinse and clean the cappuccino frother (see Chapter 7, 'Maintenance – Cappuccino frother').
Coffee only comes out in drips when it is being prepared.	Coffee or pre-ground coffee has been ground too finely and is blocking the system.	▸ Put the grinder on a coarser setting or use coarser pre-ground coffee (refer to Chapter 2, 'Preparing and using for the first time – Adjusting grinder').
Water hardness cannot be adjusted.	The CLARIS plus filter cartridge is activated.	▸ Deactivate the CLARIS plus filter cartridge.
FILL BEANS is displayed although the bean container has been filled.	The grinder is not yet completely filled with beans.	▸ Prepare a coffee speciality.
FILL WATER TANK is displayed although the water tank is full.	The water tank float is trapped.	▸ Descale the water tank ▸ (see Chapter 7, 'Maintenance – Descaling the water tank').
ERROR 2 is displayed.	If the device was exposed to the cold for a long period of time, it is disabled from heating up due to safety reasons.	▸ Warm up the device at room temperature.
Other ERROR messages are displayed.	–	▸ Turn the IMPRESSA off at the power switch. Contact Customer Support in your country (see Chapter 16 'JURA contact details').

i If you have not been able to solve the problem, contact Customer Support in your country. You will find the telephone number in Chapter 16, 'JURA contact details'.

13 Transport and environmentally neutral disposal

Transport / Empty system

Keep the packaging for your IMPRESSA. It should be used to protect the machine during transportation.

In order to protect the IMPRESSA from frost during transportation, the system must be emptied.

Precondition: READY is displayed.

- ▸ Carefully pull the frother off the Connector System©.
- ▸ Place a container under the Connector System©.
- ▸ Press the milk foam button.

  HEATING

  READY appears as soon as the IMPRESSA has heated up.
- ▸ Press the milk foam button once more.

  MILK, steam is discharged from the Connector System©.
- ▸ Turn the Rotary Switch until 40 SEC is displayed.
- ▸ Remove the water tank and empty it.

  Steam is discharged until FILL WATER TANK appears.
- ▸ Press the On/Off button to switch the machine off.
- ▸ Turn your IMPRESSA off at the power switch.

The next time you use the machine the system must be refilled (see Chapter 2, 'Preparing and using for the first time – First-time use').

Disposal

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials capable of being recycled which should be salvaged for recycling. Please therefore dispose of old machines via suitable collection systems.

14 Technical data

Rating plate

i The voltage and current vary according to the safety test. Please refer to the rating plate before connecting the device.

The rating plate is located on the bottom of your IMPRESSA. The information shown on the rating plate has the following meaning:

- V AC = alternating current in volts
- W = power output in watts
- CE = This product complies with all applicable EU directives.
- (S) = This product meets the requirements of the Decree concerning Low Voltage Electrical Products and the Decree concerning Electromagnetic Compatibility (VEMV). This is issued by the ESTI (Swiss Federal Inspectorate for Heavy Current Installations).
- (UL) = This product complies with all applicable UL directives (Underwriters Laboratories Inc.®).
- = This product complies with all applicable SAA directives (Standards Association of Australia).
- (CCC) = This product complies with all applicable CCC directives (China Compulsory Certification).

Technical data

Voltage	CE (S)	230 V AC, 50 Hz
	(UL)	120 V AC, 60 Hz
		220 –240 V AC, 50 Hz
	(CCC)	220 V AC, 50 Hz
Power	1450 W	
Safety test	(S) (UL) (CCC)	
Power consumption in standby mode	3,7 Wh	
Power consumption ENERGY SAVE –	18 Wh	
Power consumption ENERGY SAVE ✓.	11 Wh	
Pump pressure	Static max. 15 bar	

Holding capacity of water tank	1,9 l
Holding capacity of bean container	200 g
Holding capacity of coffee grounds container	Approx. 16 servings
Cable length	Approx. 1,1 m
Weight	9,6 kg
Dimensions (W x H x D)	28 x 34,5 x 43,4 cm

15 Key technologies and IMPRESSA range of products

1 Intelligent Pre Brew Aroma System (I.P.B.A.S.©)
Perfect coffee is no accident. The Intelligent Pre Brew Aroma System© produces the very best in flavour from every coffee blend and roast.
1a The freshly ground coffee beans are delivered to the infusing cylinder as a powder from the grinder.
1b There it is optimally compressed.
1c Prior to brewing, the powder is moistened. The pores swell and the flavours are released.
1d During brewing, perfect coffee is delivered to the cup, crowned by a velvety, soft crema for perfect enjoyment.

2 The IMPRESSA range of products includes the following series:
- IMPRESSA Z series – Generation II, two Cappuccini and two Latte Macchiati at the touch of a button, premium professional technology for domestic use.
- IMPRESSA S series for demanding households
- IMPRESSA J series, Perfect Enjoyment, Perfect Aesthetics
- IMPRESSA F series, simple operation, multi-winner
- IMPRESSA C series, Click & Drink
- IMPRESSA X series for catering and office applications

Obtain the advice of the JURA experts.

@ You will find the purchase advisor at www.jura.com.

3 For perfect coffee quality it is important to get the grinding right. To this end, a powerful 6-level powerful conical burr grinder with grinding cones constructed out of hardened steel is provided.

4 The variable brewing unit holds between 5 and 16 g of coffee. This means that two cups can be prepared at once in a single brewing operation.

5 Durable pipes constructed from a high-quality steel alloy conduct the water through the thermoblocks where it is heated to the correct temperature.

I.P.B.A.S.©

INTELLIGENT PRE BREW AROMA SYSTEM

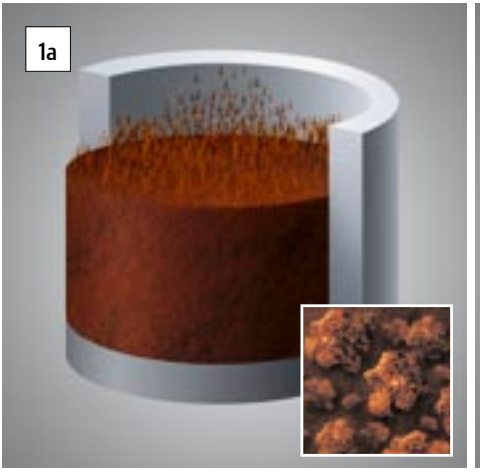

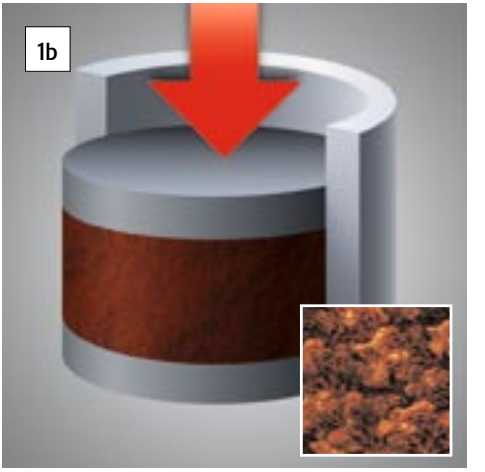

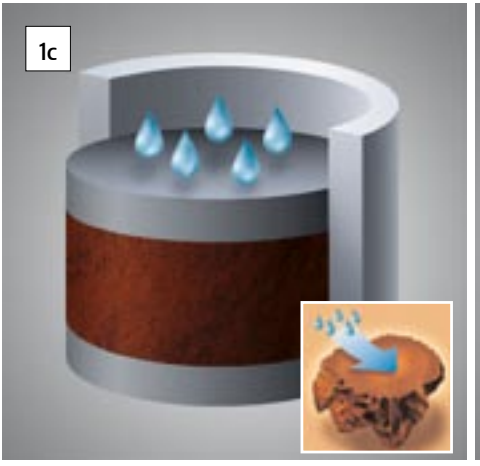

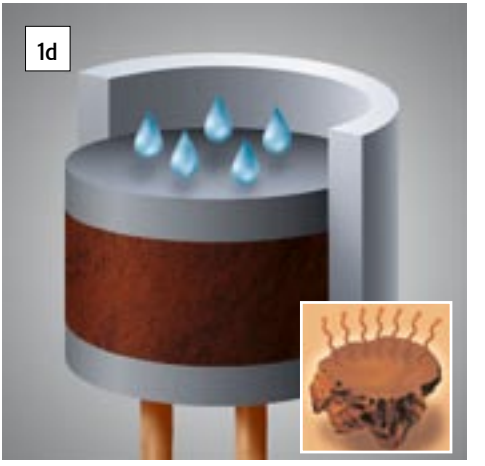

2

IMPRESSA Z – Generation II

IMPRESSA S

IMPRESSA J

IMPRESSA F

IMPRESSA C

IMPRESSA X

IMPRESSA XF

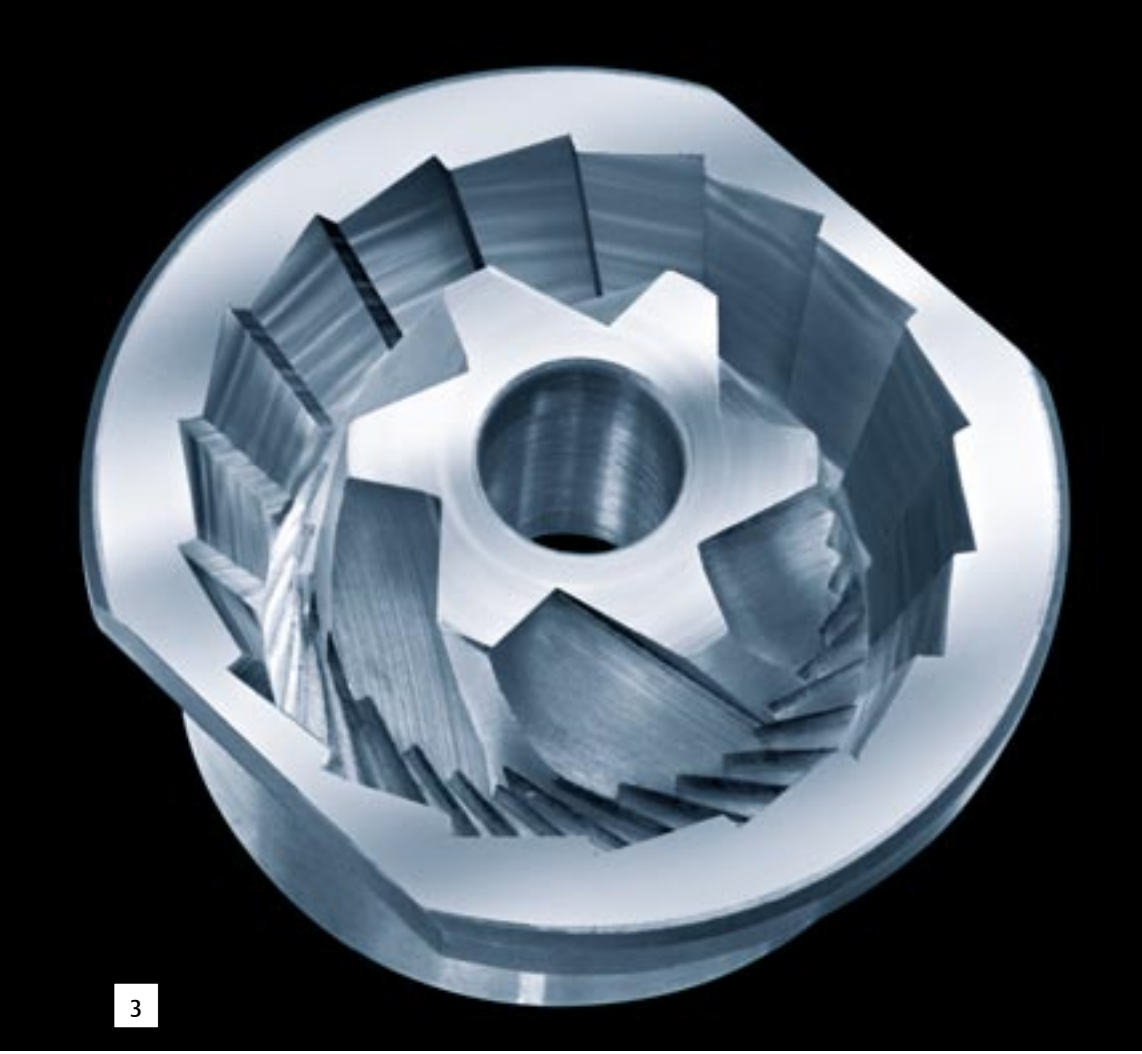

3

4

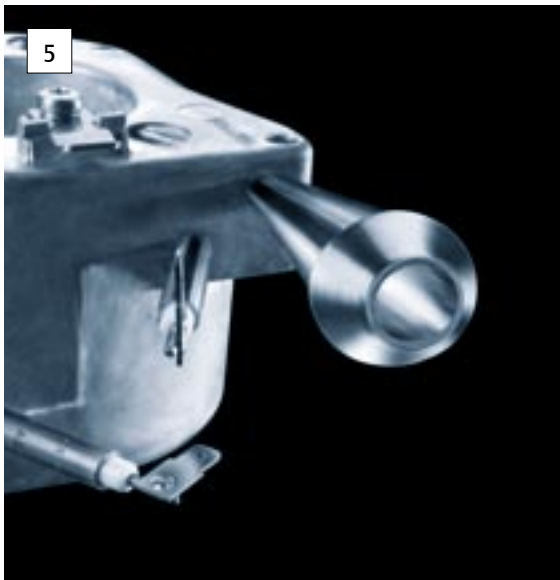

5

16 JURA contact details

A

Australia
Global Coffee Solutions Pty Ltd.

Customer Service	Phone +61 1300 552 883 Fax +61 0242 846 099 E-mail info@globalcoffee.com.au
Opening Hours	Monday to Friday 8:00 am – 5:00 pm
Distributor Address/ Service Address	Global Coffee Solutions Pty Ltd 5/77 Jardine Street Fairy Meadow NSW 2519

B

Bangladesh
Please contact Singapore office for details.

Brunei
Please contact Singapore office for details.

Burma
Please contact Singapore office for details.

C

Cambodia
Please contact Singapore office for details.

Canada
Faema Canada

Customer Service	Phone (416) 535-1555 Toll free (877) 323-6226 Fax (416) 535-3843 E-mail espresso@faema.net
Opening Hours	Monday to Friday 9:00 am – 6:00 pm Saturday 10:00 am – 5:00 pm
Distributor Address/ Service Address	Faema Canada 672 Dupont Street, Suite 201 Toronto, Ontario M6G 1Z6

China
Shanghai HJ Coffee Co., Ltd.

Customer Service	Phone +86 21 62940690 ext.31 E-mail service@hjcoffee.com
Opening Hours	Monday to Friday 09:00 – 17:30
Distributor Address/ Service Address	Shanghai HJ Coffee Co., Ltd. Room D 3F, building one Xinhua Road No. 543 Shanghai 200052

Croatia
Automatic Servis d.o.o.

Customer Service	Phone +38 5-52-663-291,293 Fax +38 5-52-663-493 E-mail info@automatic-servis.hr
Opening Hours	Monday to Thursday 07:00 – 15:00 Friday 07:00 – 14:00 Saturday 08:00 – 13:00
Distributor Address/ Service Address	Automatic Servis d.o.o. Naselje Baraka 7 52420 Buzet,Croatia

Czech Republic
Petraco, Spol. S R.O.

Customer Service	Phone +420 775 997 557 E-mail dokladal@juraswiss.cz
Opening Hours	Monday to Thursday 09:00 – 17:00 Friday 09:00 – 15:00
Distributor Address/ Service Address	Petraco, Spol. S R.O. Udolni 5 602 00 Brno

D

Denmark
Scandinavian CoffeeSystem Aps

Customer Service	Phone +45 7020 7333 Fax +45 7020 7343 E-mail service@coffeesystem.com
Opening Hours	Monday to Thursday 09:00 – 16:30 Friday 09:00 – 16:00
Distributor Address/ Service Address	Scandinavian CoffeeSystem Aps Tordenskjoldsgade 19 1055 Kobenhavn K

E

Estonia
Infomelton OÜ

Customer Service	Phone +372 651 88 55 +372 651 88 50 E-mail lavazza@lavazza.ee
Opening Hours	Monday to Friday 09:00 – 17:00
Distributor Address/ Service Address	Infomelton OÜ Weizenbergi 27 Tallinn 10150

F

Finland
Home Appliance Brokers HAB Oy

Customer Service	Phone +358 207 300 090 E-mail info@haboy.fi
Opening Hours	Monday to Friday 08:00 – 16:00
Distributor Address	Home Appliance Brokers HAB Oy Elimäenkatu 29, 00510 Helsinki
Service Address	Monilaite-Thomeko Oy Salpakuja 6, 01200 Vantaa

G

Greece
COFFEE CONNECTION S.A.

Customer Service	Phone +30 210 66 40 640 E-mail coffeeway@coffeeway.com
Opening Hours	Monday to Friday 09:00 – 17:00
Distributor Address/ Service Address	COFFEE CONNECTION S.A. Agiou Louka str. Peania Attica 190 02

H

Hong Kong PRC
Pacific Coffee Company Ltd

Customer Service	Phone +852 2805 1627 E-mail sales@pacificcoffee.com
Opening Hours	Monday to Friday 9:00 am – 6:00 pm Saturday 9:00 am – 1:00 pm
Distributor Address/ Service Address	Pacific Coffee Company Ltd 701–704 Hollywood Center 233 Hollywood Road, Sheung Wan

Hungary
Kávé Profi Kft.

Customer Service	Phone +361 248 0095 Fax +361 248 0096 E-mail kaveprofi@t-online.hu
Opening Hours	Monday 08:00 – 17:00 Tuesday 08:00 – 16:00 Wednesday to Friday 08:00 – 17:00
Distributor Address/ Service Address	Distributor Address/Service Address Kávé Profi Kft. H-1112. Budapest Budaörsi út 153.

I

Iceland
Karl K. Karlsson

Customer Service	Phone +354 540 9003 E-mail karlk@karlsson.is
Opening Hours	Monday to Friday 09:00 – 18:00
Distributor Address/ Service Address	Karl K. Karlsson Pacific Coffee Company Ltd Skútuvogur 5, 104 Reykjavík

Indonesia Bali
BHINEKA JAYA

Customer Service	Phone +62 361 724746 Mobile Nr. +62 81 23817951 or +62 361 7460521 E-mail vivi@kopibali.com
Opening Hours	Monday to Saturday 08:30 – 16:30
Distributor Address/ Service Address	BHINEKA JAYA Jl. Pulau Moyo 9A, Denpasar, Bali

Indonesia Jakarta
PT Sukses Pratama Jaya

Customer Service	Phone +62 21 6331177 Fax +62 21 63857008 E-mail cs@suprajaya.com web www.ricmas-indonesia.com
Opening Hours	Monday to Friday 08:30 – 17:00 Saturday CLOSED Service Number during off hours: +62 816907000
Distributor Address/ Service Address	PT Sukses Pratama Jaya Pusat Niaga Roxy Mas Blok C.4 No.14–15 Jl.K.H Hasyim Ashari No. 125 Jakarta Pusat 10150-Indonesia

Israel
J.Feffer l.t.d.

Customer Service	Phone +972 353 350 38 Fax +972 353 305 54 E-mail feffer-j@barak-online.net
Opening Hours	Sunday–Thursday 08:00 – 18:00 Friday 09:00 – 13:00
Distributor Address/ Service Address	J.Feffer l.t.d. 9,Simtat Ma'ale Hachoma Ind. Zone Or-Yehuda 60370, Israel

L

Labuan
Please contact Singapore office for details.

Lativa
CREMA SIA

Customer Service	Phone +371 7244082 +371 26622888 E-mail crema@crema.lv
Opening Hours	Monday to Friday 10:00 – 17:00
Distributor Address/ Service Address	CREMA SIA Gertrudes 86, Riga, LV-1009

Lithuania
JSC Pretendentas

Customer Service	Phone + 370 315 73442 Mobile +370 650 84779 E-mail alma@pretendentas.lt
Opening Hours	Monday to Friday 09:00 – 18:00
Distributor Address/ Service Address	JSC Pretendentas 62161 Alytus, str. Ulonu 33

M

Malaysia, Main
RICMAS Services Malaysia Sdn. Bhd.

Customer Service	Phone +60 3 40438131 Fax +60 3 40432131 E-mail jura@ricmas-malaysia.com web www.ricmas-malaysia.com
Opening Hours	Monday to Friday 09:00 – 17:30 Saturday 09:00 – 13:00 Service Number during off hours: +60 122905982
Distributor Address/ Service Address	RICMAS Services Malaysia Sdn. Bhd. 513 Jalan Tiong Batu 3, off Jalan Ipoh 51100 Kuala Lumpur, Malaysia

N

New Zealand
Euro Espresso Ltd.

Customer Service	Phone +64 9 277 1334 Fax +64 9 277 9375 E-mail info@euroespresso.co.nz
Opening Hours	Monday to Friday 8.30 am – 5:00 pm
Distributor Address/ Service Address	6 Mepal Place, Manukau City, Auckland PO Box 76–342, Manukau City, Auckland 1730

Norway
Black Cat Kaffe og Tehus AS

Customer Service	Phone +47 22 06 29 90 Fax +47 22 06 29 99 E-mail info@blackcatkaffeogtehus.no
Opening Hours	Monday to Friday 08:30 – 16:30
Distributor Address/ Service Address	Black Cat Kaffe og Tehus AS Aslakveien 20h, 0753 Oslo

P

Philippines
Pacific Continental Company Inc.

Customer Service	Phone +63 5513216 Fax +63 2 8318314 E-mail jura@conlinscoffee.com web www.ricmas-philippines.com
Opening Hours	Monday to Friday 09:00 – 17:30 Saturday 09:00 – 13:00 Service Number during off hours: +63 9178315155
Distributor Address/ Service Address	Pacific Continental Co. Inc. 2753 Park Avenue Pasay City 1300 Metro Manila, Philippines

Puerto Rico
ProExpo CA Consultores S.A.

Customer Service	Phone +506 234 7404 Fax +506 253 5296 E-mail info@grupocapresso.com
Distributor Address/ Service Address	ProExpo CA Consultores S.A. P.O. Box 75-2120 Calle Blancos, San Jose

R

Romania
JURA CEE VertriebsgesmbH

Customer Service	Phone +43 1 227 87-137 Fax +43 1 227 87-200 E-mail office@cee.jura.com
Opening Hours	Monday to Thursday 08:00 – 17:00 Friday 08:00 – 16:00
Distributor Address/ Service Address	JURA CEE VertriebsgesmbH Office Park 1, Top B02 A-1300 Vienna

S

Saudi Arabia
Saudi Marketing Solutions

Customer Service	Phone +9661 201 2053 Fax +9661 201 2056 E-mail info@sms-arabia.com
Opening Hours	Saturday to Wednesday 09:00 – 13:00 and 17:00 – 21:00
Distributor Address	P.O.Box 12679 Jeddah 21483
Service Address	Aruba & Muhandis Musad Al-Anqari Street Intersection, Riyadh

Singapore
RICMAS INTERNATIONAL Pte. Ltd.

Customer Service	Phone +65 6562 8853 Fax +65 6562 8854 E-mail jura@ricmas.com web www. ricmas.com
Opening Hours	Monday to Friday 09:00 – 17:30 Saturday CLOSED Service Number during off hours: +65 90210314
Distributor Address/ Service Address	RICMAS INTERNATIONAL Pte. Ltd. 25 International Business Park German Center #01-57/58 Singapore 609916

Slovakia
DECS Coffee s.r.o

Customer Service	Phone +421 2 4342 0903 Fax +421 2 4363 0999 E-mail jura@decs.sk
Opening Hours	Monday to Friday 09:00 – 17:00
Distributor Address/ Service Address	DECS Coffee s.r.o Mierová 66 821 05 Bratislava

Slovenia
AALT d.o.o.

Customer Service	Phone +386 (0) 8 2050520 Fax +386 (0) 8 2050521 E-mail info@aalt.si
Opening Hours	Monday to Friday 08:30 – 12:00 and 13:00 -17.30
Distributor Address/ Service Address	AALT d.o.o. Na jami 18 1000 Ljubljana

South Africa
International Coffee Equipment CC

Customer Service	Phone +27 11 708 2481 E-mail info@icesa.za.net
Opening Hours	Monday to Friday 08.00 – 17.00 Saturday 08.00 – 13.00
Office Address	International Coffee Equipment CC JURA Corner Building, Showroom 475/3 Hans Strydom Drive KYA Sand
Service Address	International Coffee Equipment CC JURA Corner Building, 1st Floor 475/3 Hans Strydom Drive KYA Sand

South Korea
HLI Company Limited

Customer Service	Phone +82 234 522 127 Fax Phone +82 345 229 50 E-mail wj_lee@hlikorea.com

Opening Hours	Monday to Friday 09:00 – 18:00
Distributor Address/ Service Address	HLI Company Limited 7floor, Sungwon Bldg Yeoksam-Dong, Kangnam-Ku Seoul

T

Taiwan
Eurocafé Corporation

Customer Service	Phone +886 2 28272683 Fax +886 2 28225797 E-mail service@eurocafe.com.tw
Opening Hours	Monday to Friday 9:00 am – 6.00 pm
Office Address/ Service Address	Eurocafé Corporation 2F, No. 251 Sec. 2 Hsi An Street Pei-Tou District Taipei

Thailand
RICMAS (Thailand) Co., Ltd.

Customer Service	Phone +66 2 6620543 Fax +66 2 6620544 E-mail jura@ricmas-thailand.com web www. ricmas-thailand.com
Opening Hours	Monday to Friday 09.00 – 17.30 Saturday CLOSED Service Number during off hours: +66 867966628
Distributor Address/ Service Address	RICMAS (Thailand) Co., Ltd. 55 GF Bio House Building Sukhumvit 39 Sukhumvit Road, Klongtan Nua Wattana, Bangkok 10110

U

United Arab Emirates
Coffema International General Trading L.LC.

Customer Service	Phone +971 (0) 4 3386401 Fax +971 (0) 4 3386402 E-mail jura@coffema.net
Opening Hours	Sunday to Thursday 09.00 – 17.00 Service number during off hours: +971 50 7062248
Distributor Address/ Service Address	Coffema International General Trading L.LC. PO. Box 214292 DUBAI, United Arab Emirates

United Kingdom
JURA Products Ltd

Customer Service	Phone +44 0870 4810 049 Fax +44 01282 863 411 E-mail sales@uk.jura.com support@uk.jura.com
Opening Hours	Monday to Friday 08.30 – 17.00
Distributor Address/ Service Address	Juraproducts Vivary Mill, Vivary Way, Colne Lancashire, BB8 9NW

V

Vietnam
Please contact Singapore office for details.

Index

A

Accessories 73
Amount
  Adjusting the default amount of water to suit the cup size 27
  Changing the amount of water during preparation 27
Amount of coffee
  Adjusting the default amount of water to suit the cup size 27
  Changing the amount of water during preparation 27
Amount of water
  Adjusting the default amount of water to suit the cup size 27
  Changing during preparation 27
Aroma preservation cover 8
Automatic switch-off 49

B

Barista tips 38
Bean container 8
  Aroma preservation cover 8
  Cleaning 63
  Cover 8
  Filling 19
Bus bar
  Technical data 88

C

Cappuccino 40
  With the Easy Cappuccino Frother 40
  With the Professional Cappuccino Frother 41
Cappuccino Frother
  Easy Cappuccino Frother 9
  Professional Cappuccino Frother 9
Care products 74
CLARIS plus 65, 71
CLARIS plus filter cartridge
  Changing 53
  Using and activating filter 20
  Water for perfect coffee 65
Cleaning
  Bean container 63
  Easy Cappuccino Frother 59
  Machine 54
  Professional Cappuccino Frother 62
Coffee 40
Coffee grounds container 8
Coffee spou, height-adjustable 8
Coffee strength
  Changing the coffee strength before preparation 27
Connector System© 8, 17
Contact details 95
Control options 25
Cover
  Bean container 8
  Filler funnel for pre-ground coffee 8
  Water tank 8

D

Descaling
  Machine 56
  Water tank 64
Determining water hardness and adjusting 22
Display
  Messages 83
  Plain text 9
Display messages 83
Disposal 87
Drip tray 8

E

Easy Cappuccino Frother
  Cleaning 59
  Disassembling and rinsing 60
  Rinsing 58
Emptying the system 87
Energy saving mode(E.S.M.©) 16, 47
Environmentally neutral disposal 87
Errors
  Troubleshooting 85
Espresso 39

F

Filler funnel for pre-ground coffee 8
Filling
  Bean container 19
  Water tank 18
Filter
  Changing 53
  Using and activating filter 20
Fineness of grind
  Adjusting the grinder 23
  Fineness of grind switch 8
Fineness of grind switch 8
First-time use 19

Frother
Easy Cappuccino Frother 9, 17
Professional Cappuccino Frother 9, 17

H
Hardness of water 22
Height-adjustable coffee spout 8
Hot milk
Foaming and heating milk with the Professional Cappuccino Frother 43
Hot water 44
Hot water nozzle 9

I
inserting
water tank 18
Instant coffee
Pre-ground coffee 42
Internet 17

J
JURA contact details 95

K
Knowledge Builder 17

L
Language 50

M
Machine
Cleaning 54
Descaling 56
Rinsing 52
Setting up 18
Switching off (standby) 24
Switching on 24
Machine accessories 73
Maintenance
Maintenance button 9
Maintenance tips 52
Maintenance status, Query 30
Malfunction
Troubleshooting 85
Milk 71
Foaming and heating with the Professional Cappuccino Frother 43
Foaming with the Easy Cappuccino Frother 43
Milk foam
With the Easy Cappuccino Frother 43
With the Professional Cappuccino Frother 43

O
One-off settings before and during preparation 26

P
Permanent settings in programming mode 45
Plain text display 9
Power switch 8
Pre-ground coffee 42
Filler funnel 8
Preparation
At the touch of a button 38
Cappuccino 40
Coffee 40
Espresso 39
Hot water 44
Pre-ground coffee 42
Problems
Troubleshooting 85
Professional Cappuccino Frother 17
Cleaning 62
Disassembling and rinsing 63
Rinsing 61
Programmable switch-on time 48
Programming mode 45
Automatic switch-off 49
Energy saving mode (E.S.M.©) 47
Language 50
Products 45
Programmable switch-on time 48
Time 48
Unit amount of water/Time format 50
Prompt to take action
Symbols used 14
Proper use 10

Q
Query information and maintenance status 30
Query maintenance status 30

R
Rating plate 88
Recipes 32
Reinsert
Water tank 18
Rinse
Maintenance button 9

Rinsing
Easy Cappuccino Frother 58
Machine 52
Professional Cappuccino Frother 61
Rotary Switch 9

S
Safety information 10
Service 74
JURA contact details 95
Settings
Adjusting the default amount of water to suit the cup size 27
One-off settings before and during preparation 26
Permanent settings in programming mode 45
Set up 18
Specialities 32
Trendy specialities with milk 71
Standby
Switching off 24
Supplied as standard 18
Switching off (standby) 24
Switching on 24

T
Technical data 88
Telephone
JURA contact details 95
Time 48
Time format 50
Transport 87
Troubleshooting 85

U
Use, First-time 19
Use, Proper 10

V
Voltage 88

W
Water hardness 22
Water tank 8
Descaling 64
Filling 18
Works settings 47

Directives

The machine complies with the following EU directives:

- 73/23/EEC of 19 February 1973, Low Voltage Directive including Amending Directive 93/68/EEC.
- 89/336/EEC of 3 May 1989, Electromagnetic Compatibility, including Amending Directive 92/31/EEC.

Technical changes

We reserve the right to make technical changes.

The illustrations used in the IMPRESSA C9 Manual show the IMPRESSA C9 Piano Black. Your IMPRESSA could incorporate minor changes.

Feedback

Your opinion is important to us!
Use the contact link at www.jura.com.

The Instructions for Use contain information which is protected by copyright. It is not permitted to photocopy or translate these Instructions for Use into another language without the express written consent of JURA Elektroapparate AG.

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten

www.jura.com